# **OWNER'S MANUAL 2025**

# 390 ENDURO R

ITEM NO.: 3240187EN





Congratulations on your decision to purchase a KTM motorcycle. You are now the owner of a state-of-the-art sports vehicle which, with proper care, will bring you pleasure for a long time to come.

We hope you enjoy your bike and have a safe journey at all times!

You can enter the serial numbers of your vehicle below to find the serial numbers more quickly if required:

Vehicle identification number (p. 14)	Dealer stamp
Engine number (p. 14)	

The owner's manual contained the latest information for this model series at the time of publication. However, minor differences due to further developments in design cannot be ruled out completely.

All specifications are non-binding. KTM Sportmotorcycle GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. KTM accepts no liability for delivery options, differences from illustrations and descriptions, misprints, and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of delivery.

© 2025 KTM Sportmotorcycle GmbH, Mattighofen Austria

All rights reserved. Figures: Mitterbauer / Visus Studios / KISKA / KTM

Written permission from the copyright owner is required before any duplication or reproduction.

### **ISO 9001**

KTM applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.



### Issuing institution:

TÜV SÜD Management Service GmbH

KTM Sportmotorcycle GmbH Stallhofnerstraße 3 5230 Mattighofen, Austria

This document is valid for:

390 ENDURO R EU (F5303Y5)

390 ENDURO R B.D. JP (F5386YI, F5386Y5)

390 ENDURO R B.D. UK (F5322Y5)

390 ENDURO R AR (F5342Y5)

390 ENDURO R BR (F5340Y5)

390 ENDURO R CO (F5341Y5)

390 ENDURO R PH (F5382Y5)

390 ENDURO R TW (F5381YI, F5381Y5)

390 ENDURO R B.D. RW (F5302Y5, F5302Y5L)





# **Table of contents**

1	Means	of representation	7		6.5	Switches on the right side of the handlebar	17
	1.1	Conventions	7		6.5.1	Kill switch	
	1.1.1	Icons	. 7		6.5.2		
	1.1.2	Formatting	. 7			Electric starter	
	1.1.3	Abbreviations			6.6	USB socket	
					6.7	Ignition and steering lock	
2	Safety		8		6.8	Locking the steering	
	2.1	Safety instructions	. 8		6.9	Unlocking the steering	
	2.2	Ban on tampering			6.10	Opening the fuel tank cap	
	2.3	Safe use			6.11	Closing the fuel tank cap	
	2.4	Protective clothing			6.12	Seat lock	
	2.5	Work rules			6.13	On-board tool kit	21
	2.6	Environment			6.14	Passenger strap	
	2.7	Owner's manual			6.15	Passenger footpegs	21
					6.16	Gear shift lever	22
	2.8	Usage definition			6.17	Brake pedal	22
	2.9	Improper use	10		6.18	Side stand	
3	Import	ant notes	11	7	Dashbo	pard	24
	3.1	Manufacturer's warranty, implied		,			
		warranty	11		7.1	dashboard	
	3.2	Auxiliary material, operating			7.2	activation and testing	24
		material	11		7.2.1	Activating combination	
	3.3	Spare parts, accessories	11			instrument	
	3.4	Service			7.2.2	Display test	
	3.5	Figures			7.3	warnings	
	3.6	Customer service			7.4	indicator lamps	
					7.5	Standard Display	
4	View of	f the vehicle	12		7.6	Standard Reduced	27
	4.1	View of vehicle, front left (example)			7.7	Speed	27
			12		7.8	speed	27
	4.2	View of vehicle, rear right (example)			7.9	shift light	28
			13		7.10	Ride-Mode display	28
_	0 1 .		1 /		7.11	time	29
5	Serial	number	14		7.12	coolant temperature display	29
	5.1	Vehicle identification number	14		7.13	Favorites display	30
	5.2	Type approval label	14		7.14	Navigation display (optional)	30
	5.3	Engine number	14		7.15	Call display	31
	5.4	Key number			7.16	Remote Control Mode (optional)	31
_					7.17	Menu	
6	Contro	ls	15		7.17.1		
	6.1	Clutch lever	15		7.17.2		
	6.2	Handbrake lever	15		7.17.3		
	6.3	Throttle grip			7.17.4	_	
	6.4	Switches on the left side of the			7.17.5		
	· · ·	handlebar	15		7.17.6		
	6.4.1	Combination switch					
	6.4.2	Menu buttons		8	Prepari	ng for use	56
	6.4.3	Light switch			8.1	Notes on preparing for first use	56
	6.4.4	ABS button			8.2	Running in the engine	
	6.4.5	Turn signal switch			8.3	Loading the vehicle	
	6.4.6	Horn button			8.4	Preparing the vehicle for difficult	57
					J. r	operating conditions	58
						· ·	

# **Table of contents**

9	Riding	instructions	59		12.19	Adjusting the basic position of the	0.2
	9.1	Checks and maintenance measures			12.20	clutch lever	. 83
		when preparing for use					. 83
	9.2	Starting			12.21	Adjusting play in the clutch lever	
	9.3	Starting off				<b>4</b>	. 84
	9.4	Quickshifter+ (optional)		10	Duelee -	_	٥٦
	9.5	Shifting, riding		13	Brake s	system	. 85
	9.6	Braking			13.1	Anti-lock braking system	. 85
	9.7	Stop, park			13.2	Checking the brake discs	. 86
	9.8	Transport	66		13.3	Adjusting the basic position of the	
	9.9	Towing in the event of a breakdown	66			hand brake lever	. 87
	9.10	Refueling			13.4	Checking the brake fluid level for	
					10.5	the front brake	. 8/
10	Service	schedule	68		13.5	Adding brake fluid for the front brake	97
	10.1	Service work	68		13.6	Checking that the brake pads of the	. 07
11	<b>-</b> .				13.0	front brake are secured	80
11	Tuning	the chassis	70		13.7	Checking the free travel of the brake	. 03
	11.1	Adjusting the spring preload of the			10.7	pedal	. 89
		shock absorber 🔌	70		13.8	Adjusting the free travel of the foot	
	11.2	Adjusting the shift lever	70			brake lever	. 90
12	Sarvica	work on the chassis	72		13.9	Checking the brake fluid level for	
12			12			the rear brake	. 91
	12.1	Raising the motorcycle with rear	7.0		13.10	Adding brake fluid for the rear brake	
	100	lifting gear	/2			<b>4</b>	. 91
	12.2	Removing the rear of the motorcycle	72		13.11	Checking that the brake pads of the	
	12.3	from the lifting gear Lifting the motorcycle with the front	12			rear brake are secured	. 93
	12.5	lifting gear	73	14	Wheels	s, tires	. 94
	12.4	Taking the motorcycle off the front			1 / 1	Domoving the front wheel	0.4
		lifting gear	73		14.1	Removing the front wheel	
	12.5	Cleaning the dust boots of the fork			14.2	Installing the front wheel	
		legs			14.3	Removing the rear wheel	
	12.6	Removing the seat			14.4	Installing the rear wheel 🔌	. 96
	12.7	Mounting the seat			14.5	Checking the rear hub damping	
	12.8	Checking the chain for dirt				rubber pieces 4	
	12.9	Cleaning the chain			14.6	Checking the tire condition	
		Checking the chain tension			14.7	Checking the tire pressure	
		Adjusting the chain tension	//		14.8	Checking the spoke tension	100
	12.12	Checking the chain, rear sprocket, and engine sprocket	70	15	Electric	cs	101
	12 13	Removing the front top fender			1 - 1	Demonina the 10 Whattam	101
		Installing the front top fender			15.1	Removing the 12 V battery	
		Removing the right side cover			15.2	Installing the 12 V battery 4	
		Installing the right side cover			15.3	Charging the 12 V battery 🔌	
		Removing right fuel tank cover 🔌			15.4	Changing the main fuse	
		Installing the right fuel tank cover			15.5	Changing the ABS fuses	105
	0	4	82		15.6	Changing the fuses of individual	107
		-	•		157	electrical power consumers	
					15.7	Checking the headlight setting	
					15.8	Adjusting the headlight range	
					15.9	Diagnostic connector	
						Front ACC1 and ACC2	
					10.11	Rear ACC1 and ACC2	111

# **Table of contents**

16	Cooling	system	112
	16.1 16.2	Cooling system	112
		coolant level	112
	16.3	Checking the coolant level	114
	16.4	Draining the coolant	115
	16.5	Filling/bleeding the cooling system	115
	16.6	Changing the coolant 🔌	117
17	Tuning	the engine	120
	17.1 17.2	Ride Mode	120 120
18		work on the engine	122
	18.1 18.2	Checking the engine oil level	122
	18.3	filter, cleaning the oil screens \( \lambda \)  Adding engine oil	<ul><li>122</li><li>124</li></ul>
19		ng, care	124
13			
	19.1 19.2	Cleaning the motorcycle	<ul><li>126</li><li>127</li></ul>
20	Storage	· 	129
	20.1	Storage	129
	20.2	Preparing for use after storage	130
21	Trouble	shooting	131
	21.1	troubleshooting	131
22	Technic	cal specifications	133
	22.1	Engine	133
	22.1.1		133
		Chassis	134
	22.2.1	Technical data - chassis	
	22.2.2 22.2.3	Technical data - tires Fuel capacity	135 135
	22.2.3	Electrics	136
	22.3.1	Electrics	
	22.3.2	Electrical system	136
	22.4	Fork	136
	22.4.1	Technical data - fork	136
	22.4.2	Fork capacity	136
	22.5	Shock absorber	137
	22.5.1	Technical data - shock absorber	137
	22.5.2	Capacity of shock absorber oil	137

	22.6 22.6.1 22.6.2	Tightening torque	137 137 140	
23	Declara	ations of conformity	146	
	23.1 23.2	Declarations of conformity	146	
		conformity	146	
Note	es		147	
Α	Technic	cal terms	147	
В	Fuels			
С	Operating supplies			
D	Electrics			
E	Cleanin	ng agents	153	
F	Icons		154	
	F.1 F.1.1 F.1.2 F.1.3	Symbol colors	154 154 154 154	
	Index		155	

### 1.1 Conventions

### 1.1.1 Icons

✓ Indicates a desired result (e.g. of a work step or a function).

🗶 Indicates an undesired result (e.g. of a work step or a function).

All work marked with this symbol requires specialist knowledge and technical understanding. Ensure that this work is carried out or supervised by trained personnel from an authorized KTM workshop, and that any special tools required are used.

Indicates a page reference.

Indicates information with more details.

Indicates a tip, e.g. to simplify work.

>> Indicates the result from a test step.

Indicates the end of an activity, including any rework.

### 1.1.2 Formatting

Proprietary name Indicates a proprietary name.

Name <sup>®</sup> Indicates a protected name.

**Brand** ™ Indicates a brand available on the open market.

Underlined terms

Refer to technical details of the vehicle or indicate technical terms that are

explained in the glossary.

### 1.1.3 Abbreviations

2-pc. two-part
Part no. Part number
or respectively
approx. circa
etc. et cetera

poss. possibly/possible if necessary if necessary cmpl. complete min. at least no. number no fig. no figure s. see

among others among others/not limited to

and the like and the like etc. et cetera cf. compare e.g. for example

7

### 2.1 Safety instructions

### Function of the safety instruction

Safety instruction brings attention to dangers when handling the product. Hazards are classified, named, described, and supplemented with information on how to avoid them.

- If there is a safety instruction before a list of instructions, the danger exists throughout the entire activity.
- If there is a safety instruction immediately before an instruction, the next step presents a danger.

### Safety instruction layout

All safety instructions are identified by a signal word and a warning symbol. The combination of signal word and warning symbol determines the degree of danger.



### **DANGER**

Indicates an imminent danger that leads to serious injury or death.



### WARNING

Indicates a potentially imminent danger that could lead to serious injury or death.



### **CAUTION**

Indicates a potentially imminent danger that can lead to minor or slight injuries.



### NOTE

Indicates a situation that can lead to damage to the product or the product environment.



### NOTE

Indicates a situation that can lead to environmental damage.

### 2.2 Ban on tampering

No changes may be made to the noise control equipment and components.

### Tampering that is prohibited

- Removing or disabling any devices or components used for noise control before the new vehicle is sold or delivered to the end customer.
- Removing or disabling any device or component used for noise control for purposes other than service, repair, or replacement during the service life of the vehicle.
- Use of the vehicle after a device or component used for noise control has been removed, disabled, or inadequately maintained.

### **Examples of prohibited tampering**

- Removing or drilling through rear mufflers, baffle plates, manifolds, or other components that conduct exhaust gases.
- Removing or puncturing parts of the intake system.
- Replacing moving parts of the vehicle, or parts of the exhaust system or intake system, with parts other than
  those specified by the manufacturer.

### 2.3 Safe use



### DANGER

Danger of accidents A rider who is not fit to ride poses a danger to themself and to others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
- Do not operate the vehicle if you are physically or mentally incapable of doing so.



### **DANGER**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.



### WARNING

**Danger of burns** Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Allow the vehicle parts to cool down before performing any work on the vehicle.

The vehicle should only be used when it is in perfect technical condition, for its intended purpose, and in a safe and environmentally-friendly manner.

An appropriate driver's license is needed to drive the vehicle on public roads.

Have malfunctions that impair safety promptly eliminated by an authorized KTM workshop.

Adhere to the information and warning labels on the vehicle.

### 2.4 Protective clothing



### WARNING

**Risk of injury** Missing or inadequate protective clothing increases the risk of injury.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.

### 2.5 Work rules

Unless specified otherwise, the ignition must be switched off during all work (models with ignition lock, models with transponder key) or the engine must be at a standstill (models without ignition lock or transponder key). Special tools are required for some work. The tools are not part of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

Unless otherwise noted, normal conditions apply to all tasks and descriptions.

Ambient temperature	20 °C
	(68.0 °F)
Ambient air pressure	1,013 mbar
	(14.69 psi)
Relative air humidity	60 ±5 %

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, expansion screws, seals, sealing rings, O-rings, pins, and lock washers).

A thread lock (e.g. **Loctite®**) is required for some screw connections. Observe the manufacturer's specific instructions for use.

If thread lock (e.g. **Precote®**) has already been applied to a new part, do not apply any additional thread lock. After disassembly, clean the parts that are to be reused and check them for damage and wear. Replace damaged or worn parts.

After completing a repair or service, check the operating safety of the vehicle.

### 2.6 Environment

Handling the vehicle responsibly reduces the risk of conflict with other road users and the surrounding area. The future of motorcycling also depends on using motorcycles legally, being environmentally conscious and respecting the rights of others.

When disposing of used oil, other operating and auxiliary fluids, and used components, the laws and regulations of the respective country must be observed.

As motorcycles are not subject to the EU regulations governing the disposal of end-of-life vehicles, there are no legal regulations that pertain to the disposal of an end-of-life motorcycle. More information is available from authorized KTM dealers.

### 2.7 Owner's manual

Read this owner's manual carefully and in full before riding off for the first time. The owner's manual contains information and tips on how to operate, handle, and service your vehicle, as well as advice on optimum tuning and how to avoid injuries.



### Tip

Save this owner's manual on your smartphone, for example, so that you can access it at any time.

An authorized KTM dealer will be happy to assist you if you are unsure.

The owner's manual is an important component of the vehicle. If the vehicle is sold, the owner's manual must be downloaded again by the new owner.

The owner's manual can be downloaded multiple times using the QR code or the link on the delivery certificate.

The owner's manual is also available for download from your authorized KTM dealer and on the KTM website. A physical copy can also be ordered from your authorized KTM dealer.

International KTM Website: https://www.ktm.com

### 2.8 Usage definition

KTM sport motorcycles are designed and constructed to meet the normal demands of regular road operation but not for use on race courses or offroad.



### Note

The motorcycle is only authorized for operation on public highways in the homologated version.

### 2.9 Improper use

The vehicle may only be used as intended.

Improper use can result in danger to people, property and the environment.

Any use of the vehicle beyond the intended and defined use constitutes misuse.

Improper use includes the use of operating and auxiliary materials that do not meet the required specifications for the respective use.

### 3.1 Manufacturer's warranty, implied warranty

The work prescribed in the service schedule must be carried out in an authorized KTM workshop only and confirmed in the electronic proof of service, since otherwise no warranty claims will be recognized. Damage or secondary damage caused by tampering with and/or conversions on the vehicle are not covered by the manufacturer's warranty.

### 3.2 Auxiliary material, operating material

Use operating materials and auxiliary materials in accordance with the operating instructions and specifications.

### 3.3 Spare parts, accessories

For safety reasons, only spare parts and accessories approved by KTM may be used. Installation must be carried out in an authorized KTM workshop. KTM accepts no liability for other products and any resulting damage or loss. Certain spare parts and accessory products are specified in parentheses in the descriptions. Authorized KTM dealers will be happy to help.

The current KTM PowerParts are listed for each vehicle on the KTM website.

International KTM Website: https://www.ktm.com

### 3.4 Service

A prerequisite for perfect operation and prevention of premature wear is that the service, care, and tuning work is properly carried out as described in the owner's manual. An incorrect suspension setting can lead to damage and breakage of chassis components.

Use of the vehicle under difficult conditions, such as dusty environments, heavy rain, high heat or with a heavy load, can lead to increased wear of components such as the air filter, powertrain, brake systems, or suspension components. For this reason, it may be necessary to inspect or replace components before the next scheduled service interval.

The prescribed running-in times and service intervals must be observed, otherwise the long-term durability of the vehicle will be severely impaired.

The relevant mileage or time interval is whichever occurs first.

### 3.5 Figures

Some of the figures in this document contain optional extras.

For clarity, some components may be shown disassembled or may not be shown at all. Disassembly is not always absolutely necessary in order to carry out the activities described. The textual information takes precedence.

### 3.6 Customer service


Authorized KTM dealers will be happy to answer questions about the vehicle and KTM.

A list of authorized KTM dealers can be found on the KTM website.

International KTM Website: https://www.ktm.com

# 4 View of the vehicle


# 4.1 View of vehicle, front left (example)

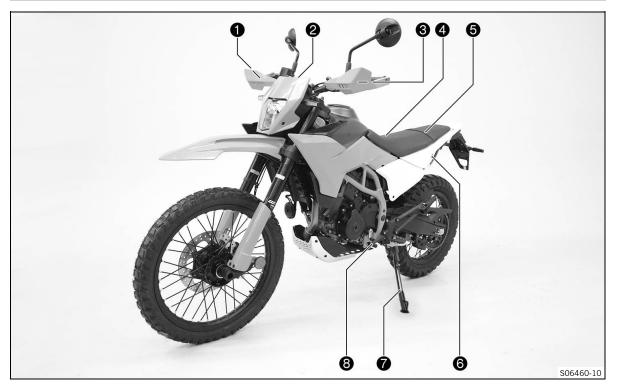

- 1 Handbrake lever (p. 15)
- 2 Dashboard
- 3 Clutch lever (p. 15)
- 4 Seat

- 6 Passenger strap (p. 21)
- 6 Seat lock (p. 21)
- 7 Side stand (p. 22)
- 8 Gear shift lever (p. 22)


# 4.2 View of vehicle, rear right (example)

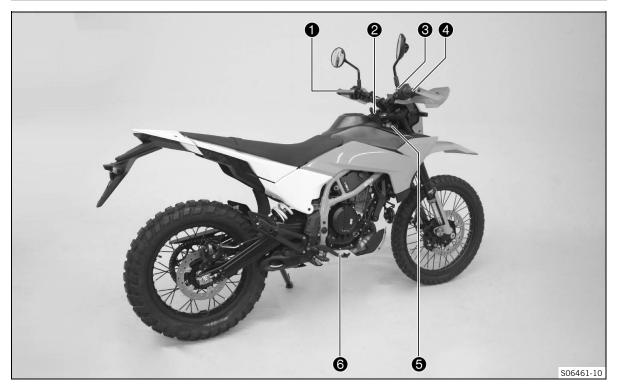

- 1 Light switch (p. 16)
- 1 Menu buttons (p. 16)
- 1 Turn signal switch 🕮 (p. 17)
- 1 Horn button (p. 17)
- 2 Ignition and steering lock (p. 18)
- **3** Kill switch (p. 17)


- 3 Electric starter (p. 18)
- 4 Throttle grip (p. 15)
- 5 Vehicle identification number (p. 14)
- **5** Type approval label (p. 14)
- 6 Brake pedal (p. 22)

### 5.1 Vehicle identification number

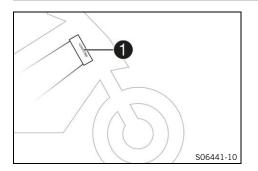


The vehicle identification number **1** is stamped on the right-hand side of the steering head.

### 5.2 Type approval label

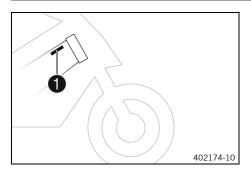


The type label 1 is on the right of the frame behind the steering head.

### 5.3 Engine number

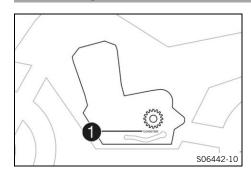

The engine number **1** is located on the left side of the engine under the engine sprocket.

### 5.4 Key number

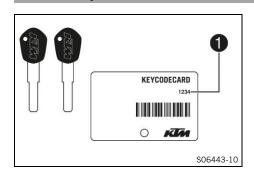

The key number 1 can be found on the KEYCODECARD.



### Note

The key number is needed to order a replacement key. Keep **KEYCODECARD** in a safe place. If at least one ignition key is still available, a spare key can be produced. If an ignition key is no longer present, the entire lock system must be replaced.

### **Clutch lever** 6.1




Clutch lever 1 is fitted on the left side of the handlebar.

### 6.2 Handbrake lever



Hand brake lever 1 is fitted on the right side of the handlebar. The front brake is engaged using the hand brake lever.

### 6.3 Throttle grip

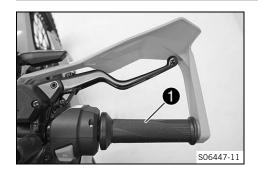


The throttle twist grip 1 is fitted on the right side of the handle-

### 6.4 Switches on the left side of the handlebar

### 6.4.1 **Combination switch**


The combination switch is fitted on the left side of the handlebar.

### Overview of the left combination switch

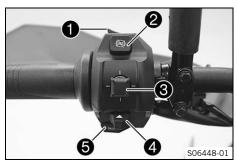

- Light switch (p. 16)
- ABS button (p. 16) 0
- Menu buttons (p. 16) 4
  - Turn signal switch (p. 17)
- Horn button (p. 17)

### 6.4.2 Menu buttons

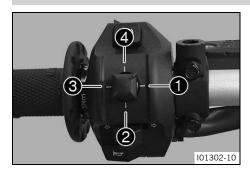

The menu buttons are fitted in the middle of the left combination switch.

The menu buttons are used to control the display on the combination instrument.


Button 1 is the **RIGHT** button.

Button 2 is the **DOWN** button.

Button **3** is the **LEFT** button.

Button 4 is the **UP** button.

### 6.4.3 Light switch

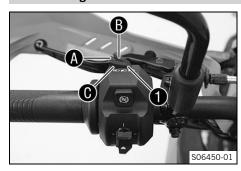

Light switch **1** is fitted on the left side of the handlebar.

Condition		Meaning
<b>≣</b> D	High/low beam switch is pressed down.	In position (A), the low beam and the tail light are switched on.
	High/low beam switch is pushed up.	In position <b>(B)</b> , the high beam and the tail light are switched on.
≣O	High/low beam switch is pressed down.	In position <b>()</b> , the headlight flasher (high beam) is actuated.

### 6.4.4 ABS button



ABS button **1** is fitted on the left side of the combination switch.



Turn signal switch 1 is fitted on the left side of the handlebar.

Condition		Meaning
4	Turn sig- nal switch pressed to the left	Left turn signal on.
$\Rightarrow$	Turn sig- nal switch pressed to the right	Right turn signal on.



### Note

An automatic turn signal switch-off function (ATIR) is available as a software feature.


The ATIR function uses a time and distance counter.

If the turn signal has been on for at least 10 seconds and 150 meters of riding distance, the turn signal is switched off

If the vehicle is stationary, both counters are stopped.

If the turn signal switch is reactivated, both counters are reset.

### 6.4.6 Horn button

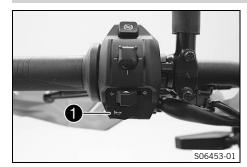

Horn button **1** is fitted on the left side of the handlebar.

Condition	Meaning
Horn buttons to in the basic position	No function
Horn buttons > pressed	The horn is operated in this position.

### 6.5 Switches on the right side of the handlebar

### 6.5.1 Kill switch



The emergency OFF switch **1** is fitted on the right side of the handlebar.

Condition		Meaning
$\bowtie$	Emergency OFF switch off	In this position, the ignition circuit is interrupted, a running engine stops, and cannot be started.
$\bigcirc$	Emergency OFF switch on	This position is required for operation; the ignition circuit is closed.

### 6.5.2 Electric starter



Electric starter 1 is fitted on the right side of the handlebar.

Condition		Meaning
(3)	Electric starter (3) in the basic position	No function
(3)	Electric starter (3) pressed	In this position, the starter motor is actuated.

### 6.6 USB socket



USB socket **1** for the power supply to external devices is mounted on the left side of the mask support.

The USB socket is activated when the ignition is switched on.

USB socket	
Voltage	5 V
Maximum current consumption	2.1 A

### 6.7 Ignition and steering lock



The ignition and steering lock is located in front of the upper triple clamp.

Condition		Meaning
$\boxtimes$	Ignition off <b>OFF</b>	In this position, the ignition circuit is interrupted, a running engine stops, and an engine at a standstill will not start. The ignition key can be removed.
$\bigcirc$	Ignition on <b>ON</b>	In this position, the ignition circuit is closed, and the engine can be started.
•	Lock steer- ing <b>LOCK</b>	In this position, the ignition circuit is interrupted and the steering locked. The ignition key can be removed.

### 6.8 Locking the steering




### NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.


The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

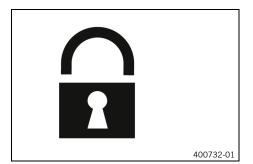

- Park the vehicle.
- Turn the handlebar all the way to the left.
- Insert the ignition key into the ignition and steering lock, press in, and turn to the left. Remove the ignition key.
  - ✓ Steering is no longer possible.

6.9 Unlocking the steering

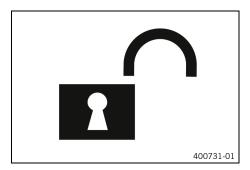

- Insert the ignition key into the ignition and steering lock, press in, and turn to the right. Remove the ignition key.
  - ✓ The handlebar can now be moved again.

6.10 Opening the fuel tank cap



### **DANGER**

Fire hazard Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



### WARNING

Danger of poisoning Fuel is harmful to health.


- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.

- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.



**Environmental hazard** Improper handling of fuel is dangerous to the environment.

- Do not allow fuel to enter the groundwater, the soil, or the sewage system.

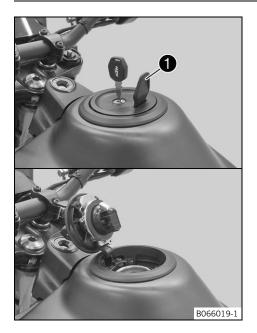

Lift cover 1 of the fuel tank filler cap and insert the ignition key into the lock.




### NOTE

**Danger of damage** The ignition key may break if overloaded.

- Push down on the fuel tank filler cap to take pressure off the ignition key.
- Turn the ignition key 90° clockwise.
- Lift the fuel tank filler cap.

### Closing the fuel tank cap

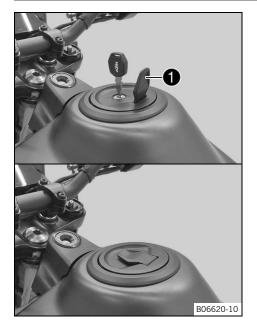



### WARNING

**Fire hazard** Fuel is highly flammable and a health hazard.

- Check that the fuel tank filler cap is locked correctly after closing.
- If fuel spills on to your clothing, change the clothing.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Insert the ignition key into the lock.
- Push down the fuel tank cap and turn the ignition key counterclockwise by 90° until the fuel tank filler cap lock engages.
- Remove ignition key and close cover 1.




# 6.12 Seat lock



The seat lock 1 is located to the left of the seat.

The seat lock can be unlocked using the ignition key.

### 6.13 On-board tool kit

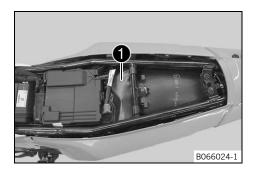


The tool set 1 is located under the seat.

### 6.14 Passenger strap



Supporting strap **1** is used for maneuvering the motorcycle. If you carry a passenger, the passenger can hold onto the grab handles during the trip.


### 6.15 Passenger footpegs

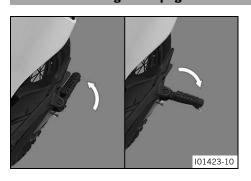


The passenger foot pegs can be folded up and down.

Condition	Meaning
Passenger foot pegs folded up	For operation without a passenger.
Passenger foot pegs folded down	For operation with a passenger.

### 6.16 Gear shift lever

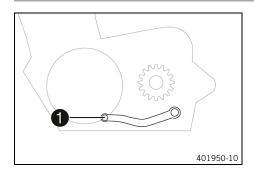


Gear shift lever 1 is mounted on the left of the engine.

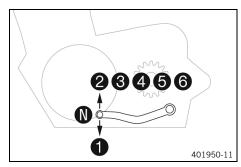

The gear positions can be seen in the figure.

The neutral or idle position is between the first and second gears.

### 6.17 Brake pedal

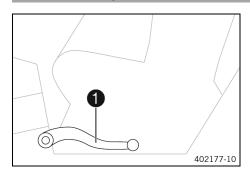

Brake pedal **1** is located in front of the right footpeg. The rear brake is operated with the brake pedal.


### 6.18 Side stand




### Note

The side stand must be folded up during use.


The side stand is coupled with the safety starting system; follow the riding instructions.

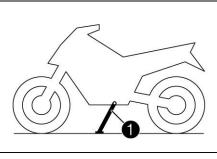

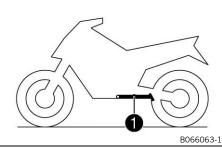


The side stand **1** is located on the left of the vehicle. The side stand is used for parking the motorcycle.

Condition	Meaning
Side stand folded out	The vehicle can be supported on the side stand. The safety starting system is active.
Side stand folded in	This position is mandatory when riding the motorcycle. The safety starting system is inactive.

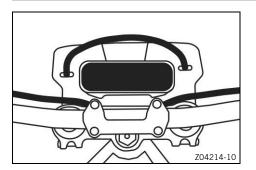

The combination instrument is attached in front of the handlebar.

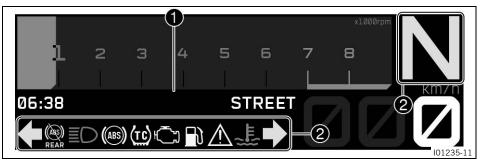

The combination instrument is divided into two function areas.

Display 1

2 indicator lamps [ (p. 25)

### 7.2 activation and testing

### 7.2.1 Activating combination instrument



The combination instrument is activated when the ignition is switched on.

### 7.2.2 Display test

To enable you to check that the display is functioning properly, all display segments light up briefly.



Warnings appear in the middle of the display; these are marked yellow or red depending on their relevance. Yellow warnings indicate a malfunction or information which requires prompt intervention or an adjustment to the riding style.



Red warnings indicate a malfunction or information which requires immediate intervention.




### Note

Warnings can be hidden by pressing any button.

All the existing warnings are displayed in the Warning submenu until they are no longer active.

### 7.4 indicator lamps

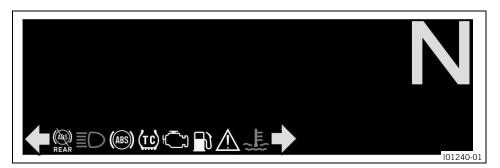

The indicator lamps offer additional information about the operating state of the motorcycle. When the ignition is switched on, all indicator lamps light up briefly.



### Note

The malfunction indicator lamp always lights up as long as the engine is not running. If the engine is running and the malfunction indicator lamp lights up, stop (taking care not to endanger yourself or other road users in the process) and contact an authorized KTM workshop.


The oil pressure warning lamp always lights up as long as the engine is not running. If the engine is running and the oil pressure warning lamp lights up, stop immediately (taking care not to endanger yourself or other road users in the process) and switch off the engine.

# 7 Dashboard

The ABS warning lamp lights up until a speed of approx. 6 km/h (approx. 4 mph) or more has been reached.

Condition		Meaning
<b>* *</b>	The turn signal indicator light flashes green with a steady blinking interval	The turn signal is switched on.
<b>E</b>	The <b>OBD</b> failure indicator light lights up yellow.	The <b>OBD</b> has detected a malfunction in the vehicle electronics. Come safely to a halt, and contact an authorized KTM workshop.
(ABS)	The ABS warning lamp lights up yellow	Status or error messages relating to <b>ABS</b> .
(ABS) REAR	The ABS rear warning light lights up yellow	ABS is deactivated on the rear wheel.
N	The idle indicator lamp lights up green	The transmission is in the neutral position.
(10)	TC indicator lamp lights up/flashes yellow	MTC is not active or is currently regulating. The TC indicator lamp also lights up if a malfunction is detected. Contact an authorized KTM workshop. The TC indicator lamp flashes if MTC makes an active intervention.
42%	The oil pressure warning light lights up red	The oil pressure is too low. Stop immediately, taking care not to endanger yourself or other road users in the process, and switch off the engine.
	The high beam indicator lamp lights up blue	The high beam is switched on.
$\triangle$	General warning light lights up yellow	A note/warning note on operating safety has been detected. This is also shown in the display.
	The fuel level warning lamp lights up yellow	The fuel level has reached the reserve mark.
<b>₹</b>	Coolant temperature indicator light lights up blue	The engine is cold.
£.	Coolant temperature indicator light lights up red	Engine is hot.

# 7.5 Standard Display

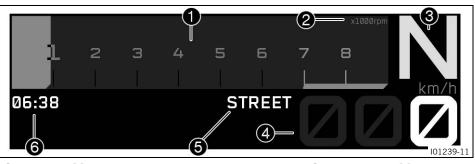


**1** speed (p. 27)

shift light (p. 28)
The shift light is integrated in the rpm gauge display.

- 2 Unit for the engine speed display
- Gear display
- 4 Speed (p. 27)

- 6 Ride-Mode display (p. 28)
- 6 time (p. 29)

### 7.6 Standard Reduced

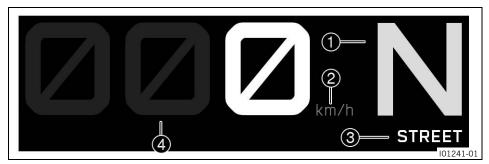

- Gear display
- 2 Unit of speed

- 3 Ride-Mode display (p. 28)
- 4 Speed (p. 27)

### 7.7 Speed



The speed is shown in area 1 of the display.

Speed **1** is shown in kilometers per hour **km/h** or in miles per hour **mph**.


The unit of speed can be configured in the  ${\bf Distance}$  submenu.

### 7.8 speed



The engine speed is displayed in revolutions per minute.

### 7.9 shift light

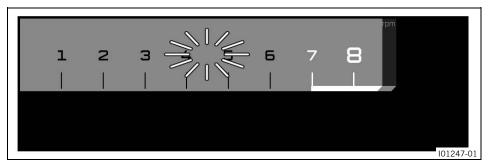

The shift light is integrated in the rpm gauge display.

In the **Shift Light** submenu, the engine speed for the shift warning light can be set. During the run-in time (up to 1000 km / 621 miles), the shift light is always active. The shift warning light can only be deactivated, and the values for **RPM1** and **RPM2** can only be adjusted after this. In **RPM1** the shift warning light flashes and in **RPM2** it flashes and the color changes.

# i

### Note

After the first service, the shift warning light is deactivated when the engine is warm and in sixth-gear.

Coolant temperature	≤ 35 °C
	(≤ 95.0 °F)
ODO	< 1,000 km (< 621.4 mi)
The shift warning light always flashes at	6,500 rpm (108.33 Hz)

Coolant temperature	> 35 °C
	(> 95.0 °F)
ODO	> 1,000 km
	(> 621.4 mi)
RPM1 shift warning light	flashes
RPM2 shift warning light	flashes and changes color

### 7.10 Ride-Mode display



The Ride Mode (p. 120) setting is shown in area of the display.

The drive mode can be configured in the Ride Mode submenu.

### 7.11 time



The time is shown in area 1 of the display.

The time can be displayed in 24-hour format or 12-hour format in all languages.


The format of the time can be configured in the Clock Format menu.



### Note

The time must be reset if the 12 V battery was disconnected from the vehicle or the fuse was removed.

### 7.12 coolant temperature display

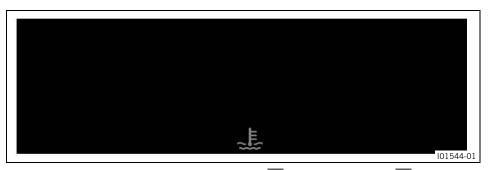

The coolant temperature is displayed by a symbol ... The color of symbol ... changes depending on the temperature. Symbol ... disappears when the engine has reached operating temperature.



### NOTE

**Engine failure** Overheating damages the engine.

- If the coolant temperature warning is displayed, stop immediately and take care not to endanger your-self or other traffic participants in the process.
- Allow the engine and cooling system to cool down.
- Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.




### Note

If the coolant temperature gauge lights up red, the display also starts to flash and a warning is displayed. If the cooling system overheats, the maximum engine speed is limited.

Condition		Meaning
<b>₹</b>	Coolant temperature gauge lights up blue.	The engine is cold.
	Coolant temperature gauge does not light up.	The engine is at operating temperature.

Condition		Meaning
<b>₹</b>	Coolant temperature gauge lights up red.	Engine is hot.

### 7.13 Favorites display

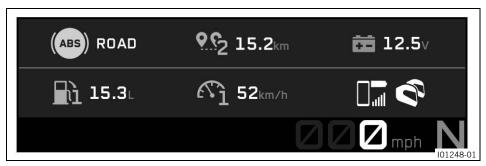


Up to six items of information are shown on the Favorites indicator.

Press the UP or DOWN button to display the Favorites.

The Favorites display can be freely configured in the Favorites submenu.

### 7.14 Navigation display (optional)

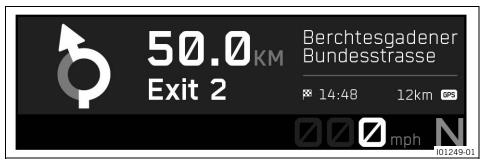

The **Navigation** indicator (optional) appears when the navigation function is activated.

In the **Navigation** display (optional), the direction arrow, the distance from the destination, the estimated arrival time of the cell phone, the distance to the next waypoint, and the street name are displayed.

The Navigation display (optional) can be switched on or off in menu Navigation (optional).

### **Condition for use:**

- The dashboard is connected to a suitable cell phone.
- The **KTMconnect** app (optional) is installed and connected on a suitable cell phone (Android devices from version 7.0, iOS devices from version 14).

### 7.15 Call display





### WARNING

Danger of accidents Headphone volume which is too high distracts attention from traffic activity.

Always select headphone volume which is low enough for you to still clearly hear acoustic signals.

The **Call** indicator appears for incoming or active calls.

Press the **RIGHT** button to accept an incoming call.

Press the **LEFT** button to reject an incoming call.

Press the **UP** button to increase the audio volume.

Press the **DOWN** button to reduce the audio volume.



### Note

It is not possible to change the audio volume using the combination switch with every cell phone.

The call duration and contact are displayed. Depending on the cell phone settings, the contact is shown by name.

You cannot navigate in the menu during an active phone conversation.

### **Condition for use:**

• The dashboard is connected to a suitable cell phone.

### 7.16 Remote Control Mode (optional)



The Remote Control Mode indicator (optional) appears when Remote Control Mode is activated.

Pressing the **LEFT** button for approx. 3 seconds activates the **Remote Control Mode** (optional).

Pressing the **LEFT** button for approx. 3 seconds exits the **Remote Control Mode** (optional).

If **Remote Control Mode** (optional) is activated, you can navigate using the combination switch in the app on a cell phone.



### Note


In **Remote Control Mode** (optional), you can only navigate within the app.

If **Remote Control Mode** (optional) is active, you cannot navigate in the combination instrument. **Remote Control Mode** (optional) cannot be activated when a menu is open.

### **Conditions for use:**

- The dashboard must be connected to a suitable cell phone.
- The **KTMconnect** app (optional) must be installed, connected and opened on a suitable cell phone (Android devices from version 7.0, iOS devices from version 14).

### 7.17 Menu

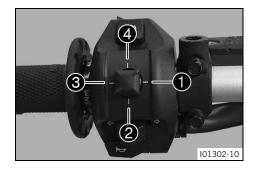



### Note

Press the **RIGHT** button **1** on the start screen to open the menu.

Navigate through the menu using the **UP** button **4** or the **DOWN** button **2**.

By pressing the **LEFT** button **3**, the menu structure jumps one step back, or the menu is closed.


### 7.17.1 Motorcycle



- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Motorcycle is highlighted.
- Pressing the **RIGHT** button opens the menu.

In Motorcycle, motorcycle-relevant settings can be found, such as the ride mode, ABS mode, and MTC.

### 7.17.1.1 Ride Mode

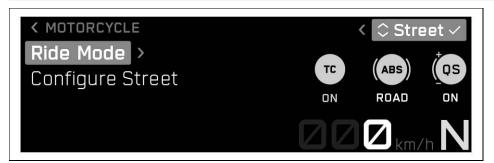

- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Motorcycle** is marked.
- Pressing the **RIGHT** button opens the menu.



### **WARNING**

**Danger of accidents** An incorrectly selected ride mode makes it more difficult to control the vehicle. The riding modes are each only suitable for certain conditions.

- Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.
- Press the UP or DOWN button until Ride Mode is highlighted.
- Press the RIGHT button to open the submenu.
- Activate the menu item using the UP or DOWN button.
- Press the RIGHT button to select the riding mode, which changes coordinated settings for the engine and motorcycle traction control.
  - ✓ **Street** Homologated performance with balanced response; the motorcycle traction control allows normal slip on the rear wheel.
  - ✓ Offroad Reduced homologated performance for better ridability; the motorcycle traction control allows less slip on the rear wheel.

### 7.17.1.2 Adjusting Ride Mode



- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Motorcycle is marked.
- Pressing the **RIGHT** button opens the menu.



### WARNING

**Danger of accidents** An incorrectly selected ride mode makes it more difficult to control the vehicle. The riding modes are each only suitable for certain conditions.

- Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.
- Press the UP or DOWN button until Configure Ride Mode is marked.

Press the RIGHT button to open the submenu.

Features of the Ride Mode, such as ABS or Display Mode, can be adjusted in Configure Ride Mode.

### 7.17.1.3 ABS



- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Motorcycle is marked.
- Pressing the **RIGHT** button opens the menu.
- Press the UP or DOWN button until Configure Ride Mode is marked.
- Press the RIGHT button to open the submenu.
- Press the UP or DOWN button until ABS is highlighted.
- Press the RIGHT button to open the submenu.
- Activate the menu item using the UP or DOWN button.



### WARNING

**Danger of accidents** An incorrectly selected ABS mode makes it more difficult to control the vehicle.

The ABS modes are each only suitable for certain conditions.

- Always select an ABS mode that suits the ground and the riding situation.
- Press the RIGHT button to select the desired ABS mode.

Do not open the throttle during the selection.



### Note

The ABS mode can be switched during the journey.

When the ABS mode Road is active, ABS controls both wheels.

When the **Offroad** ABS mode is active, ABS only controls the front wheel. The rear wheel is no longer controlled by ABS and may lock during braking maneuvers. The indicator lamp **ABS REAR** lights up.

# CONFIGURE X MTC > ABS Display Mode

- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Motorcycle is marked.
- Pressing the RIGHT button opens the menu.
- Press the UP or DOWN button until Configure Ride Mode is marked.
- Press the **RIGHT** button to open the submenu.



### WARNING

**Danger of accidents** An incorrectly selected ride mode makes it more difficult to control the vehicle. The riding modes are each only suitable for certain conditions.

- Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.
- Press the UP or DOWN button until MTC is highlighted.
- Press the **RIGHT** button to open the submenu.
- Activate the menu item using the UP or DOWN button.
- Switch RIGHT on or off by pressing the MTC button.

Do not open the throttle when switching on or off.

Press the **RIGHT** button briefly when activating the motorcycle traction control.

Hold down the RIGHT button when switching off the motorcycle traction control.



### Note

After the ignition is switched on, motorcycle traction control is enabled again.

### 7.17.1.5 QUICKSHIFTER+ (optional)




Condition: Model with QUICKSHIFTER+ (optional)

- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Motorcycle is marked.
- Pressing the RIGHT button opens the menu.
- Press the UP or DOWN button until Configure Ride Mode is marked.
- Press the **RIGHT** button to open the submenu.

- Press the UP or DOWN button until QUICKSHIFTER+ is highlighted.
- Press the RIGHT button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the RIGHT button to switch QUICKSHIFTER+ button on or off.

### 7.17.1.6 Display Mode

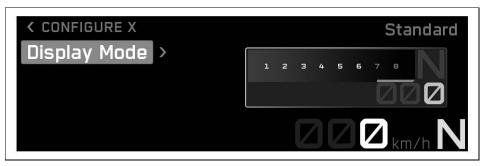

- Press the **RIGHT** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Motorcycle** is marked.
- Pressing the RIGHT button opens the menu.
- Press the UP or DOWN button until Configure Ride Mode is marked.
- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until Display Mode is highlighted.
- Press the **RIGHT** button to open the submenu.
- Activate the menu item using the UP or DOWN button.
- You can switch between the normal and minimum speedometer view by pressing the RIGHT button.


### 7.17.2 Bike info



- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Info is highlighted.
- Pressing the RIGHT button opens the menu.

General information and warnings that may be present can be called up in Bike Info.

## 7.17.2.1 Trip 1

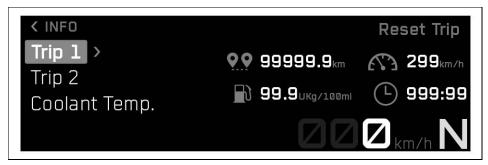

- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Bike Info is highlighted.
- Pressing the **RIGHT** button opens the menu.
- Press the **UP** or **DOWN** button until **Trip 1** is highlighted.
- Press the RIGHT button to open the submenu.

Information on Trip 1 can be viewed in the Trip 1 submenu.



#### Note

**Trip** displays the distance since the last reset, e.g. between two refueling stops. **Trip** runs along and counts to **9999**.


Trip Time shows the riding time on the basis of Trip and runs as soon as a speed signal is received.

**ØConsump.** indicates the average fuel consumption based on Trip.

**ØSpeed** indicates the average speed based on **Trip** and **Trip Time**.

Press Reset Trip to reset all entries in the Trip 1 menu.

### 7.17.2.2 Trip 2

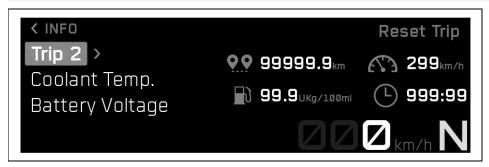

- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Bike Info is highlighted.
- Pressing the RIGHT button opens the menu.
- Press the UP or DOWN button until Trip 2 is highlighted.
- Press the RIGHT button to open the submenu.

Information on Trip 2 can be viewed in the Trip 2 submenu.



### Note

**Trip** displays the distance since the last reset, e.g. between two refueling stops. **Trip** runs along and counts to **9999**.


Trip Time shows the riding time on the basis of Trip and runs as soon as a speed signal is received.

**ØConsump.** indicates the average fuel consumption based on **Trip**.

ØSpeed indicates the average speed based on Trip and Trip Time.

Press Reset Trip to reset all entries in the Trip 2 menu.

### 7.17.2.3 Low Fuel Trip Meter

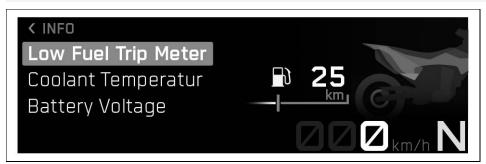

- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Bike Info is highlighted.
- Pressing the **RIGHT** button opens the menu.
- Press the UP or DOWN button until Low Fuel Trip Meter is marked.



### Note

This indicator shows the distance traveled since the beginning of the fuel reserve.

When the indicator is closed, the fuel level warning lamp continues to be lit up.

The display is automatically reset after refueling.

### 7.17.2.4 info



- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Bike Info is highlighted.
- Pressing the **RIGHT** button opens the menu.
- Press the UP or DOWN button until Info is highlighted.

Water displays the coolant temperature.

Battery displays the battery voltage.


**Odometer** displays the total mileage.

Date & Time displays the time and the date.

**Service** displays when the next service is due.

Warnings displays warnings that have occurred until they are no longer active.

## 7.17.2.5 Warning

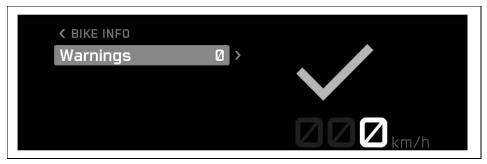

Condition: Message or warning is present

- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Bike Info is highlighted.
- Pressing the RIGHT button opens the menu.
- Press the **UP** or **DOWN** button until **Warning** is highlighted.
- Press the RIGHT button to open the submenu.
- Use the **UP** or **DOWN** button to navigate through the warnings.



#### Note

The warnings that have occurred are saved in the display until they are no longer active.

### 7.17.3 navigation



Condition: Function **Bluetooth®** activated, The **KTMconnect** app (optional) is installed and connected on a suitable cell phone (Android devices from version 7.0, iOS devices from version 14), The dashboard is connected to a suitable cell phone, GPS function is activated on the connected cell phone, For voice navigation: The dashboard is connected to a suitable communication system and an appropriate language package has been downloaded in the **KTMconnect Navigation** app (optional)

- Press the **RIGHT** button when the menu is closed.
- Press the **UP** or **DOWN** button until navigation is marked.
- Pressing the **RIGHT** button opens the menu.

### 7.17.3.1 Volume (optional)



Condition: The **KTMconnect** app (optional) is installed and connected on a suitable cell phone (Android devices from version 7.0, iOS devices from version 14), Dashboard is connected to a suitable cell phone, For voice navigation: the dashboard is connected to a suitable communication system and an appropriate language package has been downloaded in the **KTMconnect** app (optional)

- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Navigation is marked.
- Pressing the RIGHT button opens the menu.



#### WARNING

**Danger of accidents** Headphone volume which is too high distracts attention from traffic activity.

- Always select headphone volume which is low enough for you to still clearly hear acoustic signals.
- Press the UP or DOWN button until Volume is marked.
- Press the RIGHT button to open the submenu.
- Press the **UP** button to increase the volume of the activated voice navigation.
- Press the **DOWN** button to reduce the volume of the activated voice navigation.

### 7.17.3.2 Last Destination (optional)



Condition: Function **Bluetooth®** activated, **KTMconnect** app (optional) is installed and opened on a suitable cell phone (Android devices from version 7.0, iOS devices from version 13), The dashboard is connected to a suitable cell phone, GPS function is activated on the connected cell phone

- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Navigation is marked.
- Pressing the RIGHT button opens the menu.
- Press the UP or DOWN button until Last Destination is marked.
- Press the RIGHT button to open the submenu.
- Press the **UP** or **DOWN** button to select an address.
- Press the **RIGHT** button to confirm the selection and start navigation.

#### Note

The last 10 addresses searched for in the Last Destination app (optional) are saved in KTMconnect.

### 7.17.3.3 Skip Waypoint (optional)



Condition: Function **Bluetooth®** activated, **KTMconnect** app (optional) is installed and opened on a suitable cell phone, The dashboard is connected to a suitable cell phone, GPS function is activated on the connected cell phone, Navigation with at least one interim destination has been started in the **KTMconnect** app (optional)

- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Navigation is marked.
- Pressing the RIGHT button opens the menu.
- Press the **UP** or **DOWN** button until **Skip Waypoint** is marked.
- Press the RIGHT button to select the waypoint.
- Press the **RIGHT** button again to confirm the selection and the waypoint is removed.

### 7.17.3.4 Favorites (optional)



Condition: **Bluetooth®** function is activated., **KTMconnect** app (optional) is installed and opened on a suitable cell phone (Android devices from version 7.0, iOS devices from version 13), The dashboard is connected to a suitable cell phone, GPS function is activated on the connected cell phone, Favorites are saved in the **KTMconnect** app (optional)

- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Navigation is marked.
- Pressing the **RIGHT** button opens the menu.
- Press the UP or DOWN button until Favorites is marked.
- Press the **RIGHT** button to open the submenu.
- Press the **UP** or **DOWN** button to select an address.
- Press the **RIGHT** button to confirm the selection and start navigation.



#### Note

10 addresses in the **Favorites** app (optional) can be stored in **KTMconnect**.

### 7.17.3.5 Point of Interest (optional)



Condition: Function **Bluetooth®** activated, The **KTMconnect** app (optional) is installed and opened on a suitable cell phone (Android devices from version 7.0, iOS devices from version 14), The dashboard is connected to a suitable cell phone

- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Navigation** is marked.
- Pressing the **RIGHT** button opens the menu.
- Press the UP or DOWN button until Point of Interest is marked.
- Press the **RIGHT** button to confirm the selection.
- Press the **UP** or **DOWN** button to select an address.
- Press the **RIGHT** button to confirm the selection and start navigation.



#### Note

In Point of Interest, selected categories can be displayed in the KTMconnect app (optional).

### 7.17.3.6 Stop Navigation (optional)



Condition: Function **Bluetooth®** activated, **KTMconnect** app (optional) is installed and opened on a suitable cell phone (Android devices from version 7.0, iOS devices from version 13), The dashboard is connected to a suitable cell phone

- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Navigation** is marked.
- Pressing the **RIGHT** button opens the menu.
- Press the UP or DOWN button until Stop Navigation is marked.
- Press the RIGHT button to confirm the selection and end navigation.

### 7.17.4 audio



Condition: Function **Bluetooth®** activated, The dashboard is connected to a suitable cell phone., The dashboard is connected to a suitable communication system or the **Headset Type Corded** is selected

- Press the **RIGHT** button when the menu is closed.



#### WARNING

Danger of accidents Headphone volume which is too high distracts attention from traffic activity.

Always select headphone volume which is low enough for you to still clearly hear acoustic signals.


- Press the **UP** or **DOWN** button until **Audio** is highlighted.
- Press the **RIGHT** button to open the menu.
- Press and hold **UP** button to increase the audio volume.
- Press and hold **DOWN** button to reduce the audio volume.
- Press **UP** button briefly to change to the next audio track.
- Briefly pressing the **DOWN** button once or twice replays the current audio track from the start or changes to the previous audio track, depending on the cell phone.
- Press RIGHT button to play or pause the audio track.



#### Note

With some cell phones, the cell phone audio player needs to be started before playback is possible. The audio function can be added to **Custom Switch** for easier operation.

### 7.17.5 call

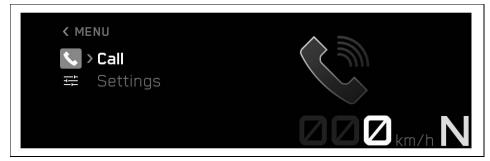

Condition: Function **Bluetooth®** activated, Function **Bluetooth®** also activated on the device that is to be paired, Dashboard is connected to a suitable cell phone, Dashboard is connected to a suitable audio device

- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Call** is highlighted.
- Pressing the RIGHT button opens the menu.

Press the **RIGHT** button to accept an incoming call.

Press the **LEFT** button to reject an incoming call.


Press and hold **UP** button to increase the audio volume.

# 7 Dashboard

Press and hold **DOWN** button to reduce the audio volume.

The last calls and favorites can be called up in the Call menu.

#### 7.17.5.1 Last Calls

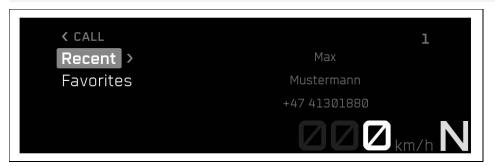



#### WARNING

**Danger of accidents** Headphone volume which is too high distracts attention from traffic activity.

- Always select headphone volume which is low enough for you to still clearly hear acoustic signals.
- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Call is highlighted.



#### Note

It is not possible to change the audio volume using the combination switch with every cell phone.


The call duration and contact are displayed. Depending on the cell phone settings, the contact is shown by name.

If necessary, accessing contacts must be enabled on the cell phone.

You cannot navigate in the menu during an active phone conversation.

- Pressing the **RIGHT** button opens the menu.
- Press the **UP** or **DOWN** button until **Last Calls** is highlighted.
- Press the RIGHT button to open the submenu.
- Press the **UP** or **DOWN** button until the desired person is marked.
- This person can be called by pressing the RIGHT button.

### 7.17.5.2 favorites

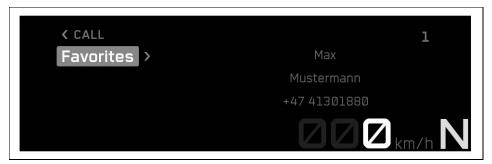



### **WARNING**

Danger of accidents Headphone volume which is too high distracts attention from traffic activity.

- Always select headphone volume which is low enough for you to still clearly hear acoustic signals.
- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Call is highlighted.



#### Note

It is not possible to change the audio volume using the combination switch with every cell phone.

The call duration and contact are displayed. Depending on the cell phone settings, the contact is shown by name.

If necessary, accessing contacts must be enabled on the cell phone.

You cannot navigate in the menu during an active phone conversation.

- Pressing the RIGHT button opens the menu.
- Press the UP or DOWN button until Favorites is highlighted.
- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until the desired person is marked.
- This person can be called by pressing the RIGHT button.


### 7.17.6 Settings



- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Pressing the **RIGHT** button opens the menu.

In menu **Settings**, favorites, **Connectivity** (optional), and the shift light can be configured. Settings can be made for units or various values. Several functions can be enabled or disabled.

## 7.17.6.1 favorites

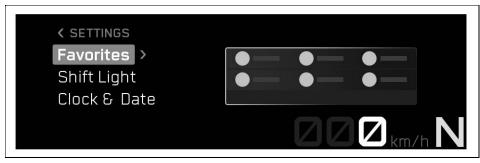

Condition: Motorcycle is stationary

- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Press the **RIGHT** button to open the menu.
- Press the **UP** or **DOWN** button until "Favorites" is highlighted.
- Press the RIGHT button to open the submenu.
- Access menu item with the UP or DOWN button, and add the selected information to the Favorites display using the RIGHT button.

Up to six sets of information can be selected in menu Favorites.

### 7.17.6.2 connectivity



Condition: Motorcycle is stationary, Function Bluetooth® activated

- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Press the **RIGHT** button to open the menu.
- Press the UP or DOWN button until Connectivity is highlighted.
- Press the **RIGHT** button to open the submenu.

A suitable cell phone or communication system can be paired with the dashboard via **Bluetooth®** in menu **Connectivity** and the audio function and navigation function can be configured.




#### Note

Not every cell phone and communication system is suitable for pairing with the dashboard.

The standard **Bluetooth®** 4.0 must be supported.

### 7.17.6.3 Bluetooth

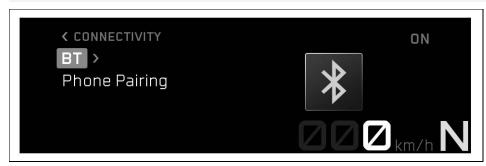

- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press **RIGHT** button to open the menu.
- Press the UP or DOWN button until Connectivity is highlighted.
- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until Bluetooth is highlighted.
- Press the **RIGHT** button to open the submenu.
- Activate the menu item using the UP or DOWN button.
- Press the RIGHT button to switch the Bluetooth® function on or off.




#### Note

The function **Bluetooth®** must be activated to pair a suitable cell phone or communication system with the vehicle.

Not every cell phone and communication system is suitable for pairing with the dashboard.

### 7.17.6.4 pairing a phone

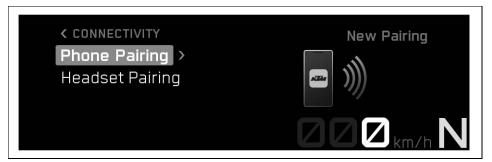

- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Press RIGHT button to open the menu.
- Press the UP or DOWN button until Connectivity is highlighted.
- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until "Pair phone" is highlighted.



#### Note

Only one cell phone can be paired with the vehicle at a time.

- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until New Pairing is marked.
- Press the RIGHT button to open the submenu.
- The vehicle starts the search for a suitable cell phone. If the search is successful, the name of the cell phone is displayed again in the pairing menu. Press the **RIGHT** button to start the pairing.



#### Note

The cell phone must be visible via **Bluetooth®** in order for the cell phone to be found by the vehicle. Not every cell phone is suitable for pairing with the vehicle.

A message appears on the combination instrument indicating that the vehicle is now ready for pairing. The
pairing is successfully completed by confirming the Passkey on the cell phone and on the dashboard.



#### Note

Follow the instructions in the app when connecting with **KTMconnect**. Confirmation may be required on the combination instrument.

- Press the UP or DOWN button until "Delete pairing" is highlighted. The paired device can be deleted by pressing the RIGHT button.
- Move the previously paired device into the range of the vehicle while the Bluetooth® function is active.
  - ✓ The device is automatically connected with the vehicle.
  - **x** If the device is not automatically connected with the vehicle after approx. 30 seconds:
    - Switch on the vehicle again or repeat the New Pairing procedure.

In submenu Phone Pairing, a suitable cell phone can be paired with the dashboard via Bluetooth®.



#### Note

Not every cell phone and communication system is suitable for pairing with the dashboard.

Make sure the end device is in the correct pairing mode for call management. If the end device is only paired for media playback, the call function may not work.

### 7.17.6.5 headset pairing



- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Press RIGHT button to open the menu.
- Press the UP or DOWN button until Connectivity is highlighted.
- Press the RIGHT button to open the submenu.
- Press the UP or DOWN button until Riders Headset is highlighted.
- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until New Pairing is marked.
- Press the **RIGHT** button to open the submenu.
- The vehicle starts searching for a suitable communication system. If the search was successful, the name of the rider's audio device is displayed in the **New Pairing** submenu. Press the **RIGHT** button to start the pairing.



#### Note

The communication system must be in pairing mode for the communication system to be found by the vehicle. Follow the instructions in the communication system owner's manual.

Press the **UP** or **DOWN** button until **Delete Pairing** is highlighted. The paired device can be deleted by pressing the **RIGHT** button.

Not every communication system is suitable for pairing with the vehicle.

- Move the previously paired device into the range of the vehicle while the Bluetooth® function is active.
  - ✓ The device is automatically connected with the vehicle.
  - **x** If the device is not automatically connected with the vehicle after approx. 30 seconds:
    - Switch on the vehicle again or repeat the New Pairing procedure.

In the Riders Headset menu, a suitable rider communication system can be paired with the vehicle.

### 7.17.6.6 Type of audio device



- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press **RIGHT** button to open the menu.
- Press the **UP** or **DOWN** button until **Connectivity** is highlighted.
- Press the RIGHT button to open the submenu.
- Press the UP or DOWN button until Headset Type is highlighted.
- $-\,\,$  Activate the menu item using the  ${\bf UP}$  or  ${\bf DOWN}$  button.

- Press the **RIGHT** button to change the rider audio device type.

The connection mode for the rider headset can be selected in the **Headset Type** menu.

The communication system is connected to the vehicle wirelessly via **Bluetooth Headset** in **Bluetooth®** display mode


The communication system is connected directly to the smartphone in display mode Corded Headset.



### Note

The Riders Headset menu item is only available in Headset Type Bluetooth.

## 7.17.6.7 Shift Light

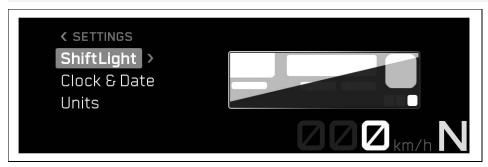


Condition: Motorcycle is stationary, **0D0** > 1,000 km (621 miles)

- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press the **RIGHT** button to open the menu.
- Press the UP or DOWN button until Shift Light is highlighted.
- Press the **RIGHT** button to open the submenu.

The shift warning light can be configured in the **Shift Light** submenu.


### 7.17.6.8 Shift Light Activation

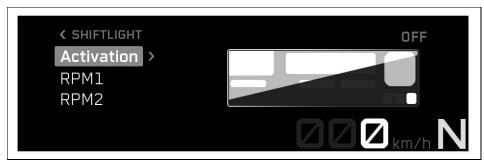

Condition: Motorcycle is stationary, **0D0** > 1,000 km (621 miles)

- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Press RIGHT button to open the menu.
- Press the **UP** or **DOWN** button until **Shift Light** is highlighted.
- Press the RIGHT button to open the submenu.
- Press the UP or DOWN button until Activation is highlighted.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the RIGHT button to switch the shift warning light on or off.

### 7.17.6.9 RPM1

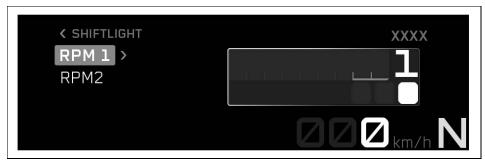

Condition: Motorcycle is stationary, **0D0** > 1,000 km (621 miles)

- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Press RIGHT button to open the menu.
- Press the **UP** or **DOWN** button until **Shift Light** is highlighted.
- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until RPM1 is highlighted.
- Press the **RIGHT** button to open the submenu.
- Activate the menu item using the UP or DOWN button.
- Set the value for RIGHT by pressing the RPM1 button.

RPM1 must not be larger than RPM2.




#### Note

**RPM1** can be set in intervals of 500 between 5,500 and 10,000 rpm.

If the engine speed reaches the set value **RPM1**, the engine speed display flashes as a shift warning light.

### 7.17.6.10 RPM2

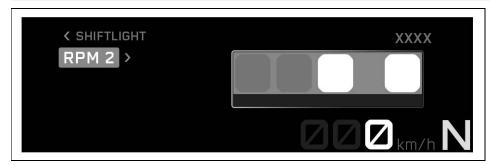

Condition: Motorcycle is stationary, **ODO** > 1,000 km (621 miles)

- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Press RIGHT button to open the menu.
- Press the UP or DOWN button until Shift Light is highlighted.
- Press the RIGHT button to open the submenu.
- Press the **UP** or **DOWN** button until **RPM2** is highlighted.
- Press the **RIGHT** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Set the value for RIGHT by pressing the RPM2 button.

RPM2 must not be smaller than RPM1.

### Note

**RPM2** can be set in intervals of 500 between 7,000 and 10,000 rpm. If the engine speed reaches the set value **RPM2**, the screen flashes as a shift warning light.

### 7.17.6.11 Setting the time and date

Condition: Motorcycle is stationary




- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Settings appears.
- Pressing the **RIGHT** button opens the menu.
- Press the **UP** or **DOWN** button until **Clock & Date** is highlighted.
- Press the **RIGHT** button to open the submenu.

### Setting the clock



- Press the UP or DOWN button until Set Clock is marked.
- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until the hour is set.
- Press the RIGHT button to select the hour.
- Press the UP or DOWN button until the minute is set.
- Press the RIGHT button to select the minute.
- Press the **LEFT** button to exit the menu.

### Setting the date

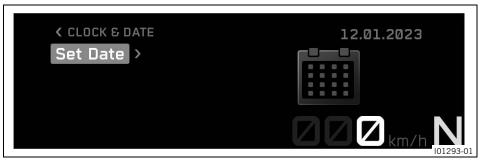

- Press the UP or DOWN button until Set Date is marked.
- Press the **RIGHT** button to open the submenu.

- Press the **UP** or **DOWN** button until the day is set.
- Press the **RIGHT** button to select the day.
- Press the UP or DOWN button until the month is set.
- Press the RIGHT button to select the month.
- Press the UP or DOWN button until the year is set.
- Press the **RIGHT** button to select the year.
- Press the LEFT button to exit the menu.

### 7.17.6.12 Clock format



Condition: Motorcycle is stationary


- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Pressing the **RIGHT** button opens the menu.
- Press the **UP** or **DOWN** button until **Clock Format** is highlighted.
- Press the **RIGHT** button to open the submenu.
- Activate the menu item using the UP or DOWN button.
- Press the RIGHT button to select the time format.



#### Note

The possible settings are 24h and 12h.

## 7.17.6.13 Date format

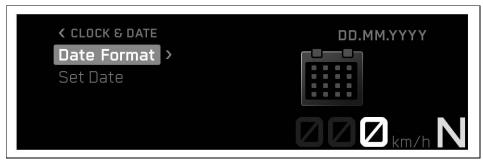

Condition: Motorcycle is stationary

- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Pressing the **RIGHT** button opens the menu.
- Press the UP or DOWN button until Date Format is highlighted.
- Press the RIGHT button to open the submenu.
- Activate the menu item using the UP or DOWN button.
- Press the RIGHT button to select the date format.

52


4

•

### Note

The possible settings are DD.MM.YYYY, MM.DD.YYYY and YYYY.MM.DD.

### 7.17.6.14 Units

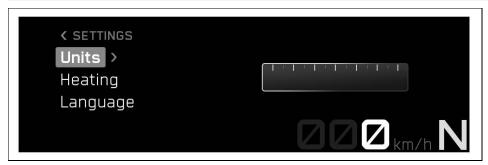


Condition: Motorcycle is stationary

- Press the **RIGHT** button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press the RIGHT button to open the menu.
- Press the UP or DOWN button until Units is highlighted.
- Press the RIGHT button to open the submenu.

The **Units** submenu allows settings to be made for units or various values.

### 7.17.6.15 Distance

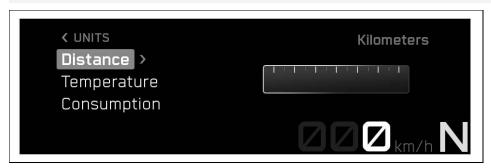

Condition: Motorcycle is stationary

- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press RIGHT button to open the menu.
- Press the **UP** or **DOWN** button until **Units** is highlighted.
- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until Distance is marked.
- Press the RIGHT button to open the submenu.
- Activate the menu item using the UP or DOWN button.
- Press the RIGHT button to confirm the desired unit.



### Note

Kilometers and miles can be set.

### 7.17.6.16 **Temperature**



Condition: Motorcycle is stationary


- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press RIGHT button to open the menu.
- Press the UP or DOWN button until Units is highlighted.
- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until Temperature is marked.
- Press the **RIGHT** button to open the submenu.
- Activate the menu item using the UP or DOWN button.
- Press the **RIGHT** button to confirm the desired unit.



#### Note

Celsius and Fahrenheit can be set.

## 7.17.6.17 Consumption

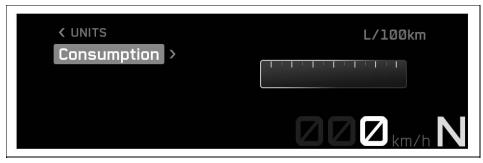

Condition: Motorcycle is stationary


- Press the RIGHT button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Press RIGHT button to open the menu.
- Press the UP or DOWN button until Units is highlighted.
- Press the **RIGHT** button to open the submenu.
- Press the UP or DOWN button until Consumption is marked.
- Press the RIGHT button to open the submenu.
- Activate the menu item using the UP or DOWN button.
- Press the RIGHT button to confirm the desired unit.



### Note

The following can be set: I/100 km, km/l, USG/100 mi, mi/USG, malfunction indicator light, UKG/100 mi and mi/UKG.

### 7.17.6.18 Language

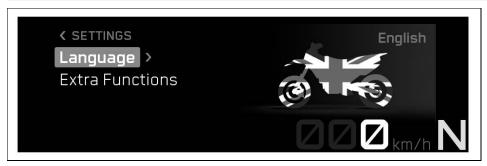

Condition: Motorcycle is stationary

- Press the RIGHT button when the menu is closed.
- Press the **UP** or **DOWN** button until **Settings** is highlighted.
- Press the RIGHT button to open the menu.
- Press the **UP** or **DOWN** button until **Language** is highlighted.
- Press the **RIGHT** button to open the submenu.
- Activate the menu item using the **UP** or **DOWN** button.
- Press the RIGHT button to confirm the desired language.



#### lote

The menu languages are US English, UK English, German, Italian, French, and Spanish.

### 7.17.6.19 Extra Functions



Condition: Motorcycle is stationary, Motorcycle with optional supplementary function

- Press the **RIGHT** button when the menu is closed.
- Press the UP or DOWN button until Settings is highlighted.
- Press the RIGHT button to open the menu.
- Press the UP or DOWN button until Extra Functions is highlighted.
- Press the RIGHT button to open the submenu.
- Use the UP or DOWN button to navigate through the extra functions.



#### Note

The optional extra functions are listed.

The current KTM PowerParts and available software are listed on the KTM website.

### 8.1 Notes on preparing for first use



#### **DANGER**

**Danger of accidents** A rider who is not fit to ride poses a danger to themself and to others.

- Do not operate the vehicle if you are not fit to ride due to alcohol, drugs, or medication.
- Do not operate the vehicle if you are physically or mentally incapable of doing so.



### WARNING

Risk of injury Missing or inadequate protective clothing increases the risk of injury.

- Wear appropriate protective clothing such as helmet, boots, gloves as well as pants and a jacket with protectors on all rides.
- Always wear protective clothing that is in good condition and meets the legal regulations.



#### WARNING

**Danger of accidents** Different tire profiles on the front and rear wheels can make it more difficult to control the vehicle.

Make sure that only tires of the same tread type are mounted to the front and rear wheel.



### WARNING

**Danger of accidents** Non-approved or non-recommended tyres and wheels impact the handling characteristic.

Only use tires and wheels approved and recommended by the vehicle manufacturer with the corresponding speed rating.



### WARNING

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

- Run in new tires with moderate riding and only gradually increase the lean angle.

Run-in distance	200 km
	(124.3 mi)



#### Note

When using the vehicle, remember that others may feel disturbed by excessive noise.

- Ensure that the pre-sales inspection work has been carried out by an authorized KTM workshop.
  - ✓ The delivery certificate is transferred upon vehicle handover.
- Read the entire owner's manual before riding for the first time.
- Get to know the controls.
- Get used to the handling characteristics of the motorcycle on suitable terrain before undertaking a more challenging ride. Also, ride as slowly as possible to get a better feeling for the motorcycle.
- Hold the handlebar firmly with both hands and keep your feet on the footpegs when riding.
- Run in the engine. (p. 57)

4

### 8.2 Running in the engine

During the running-in time, do not exceed the specified engine speed.

Maximum engine speed	
During first: 1,000 km (621.4 mi)	7,500 rpm (125.00 Hz)

Avoid fully opening the throttle.



#### Note

During the running-in phase, the shift warning light is set to a specified value and cannot be changed.

### 8.3 Loading the vehicle



#### WARNING

**Danger of accidents** Total weight and axle loads influence the handling characteristic.

The total weight consists of: operational vehicle with a full tank, rider and, if applicable, a passenger with protective clothing and helmet, and, if applicable, mounted luggage.

Do not exceed the maximum permissible total weight or the axle loads.



### WARNING

**Danger of accidents** Improper mounting of cases, tank rucksacks or other luggage impairs the handling characteristics.

Luggage mounted incorrectly can slip while the vehicle is in motion.

- Mount and secure all luggage according to the manufacturer's instructions.
- Check that your luggage is fixed properly at regular intervals.



#### WARNING

**Danger of accidents** The luggage system will be damaged if it is overloaded.

- Read the manufacturer information on maximum payload when mounting cases.



### WARNING

**Danger of accidents** Items of luggage that have slipped or are incorrectly fastened can obscure the lighting system.

- Check that your luggage is fixed properly at regular intervals.
- Make sure that the lighting system is not covered by luggage.



### WARNING

**Danger of accidents** A high payload alters the handling characteristic and increases the stopping distance.

Adapt your speed to your payload.



### **WARNING**

**Danger of accidents** Improper mounting of cases, tank rucksacks or other luggage impairs the handling characteristics.

Luggage mounted incorrectly can slip while the vehicle is in motion.

- Mount and secure all luggage according to the manufacturer's instructions.
- Check that your luggage is fixed properly at regular intervals.
- If luggage is carried, ensure it is fixed firmly as close as possible to the center of the vehicle and ensure even
  weight distribution between the front and rear wheels.

The maximum permissible total weight and the maximum permissible axle loads must not be exceeded.				
Maximum permissible total weight	375 kg			
	(826.7 lb)			
Maximum permissible front axle load	135 kg			
	(297.6 lb)			
Maximum permissible rear axle load	240 kg			
	(529.1 lb)			

## 8.4 Preparing the vehicle for difficult operating conditions



#### Note

Use of the vehicle under difficult conditions, such as on sand, dust or on wet and muddy roads/terrain, can result in significantly increased wear of components, such as the powertrain, brake system, or suspension components. For this reason, it may be necessary to inspect or replace parts before the next scheduled service interval.



#### Note

In dusty conditions, it may be necessary to check and replace the air filter more frequently, possibly even daily.

- Check the connector for humidity and corrosion and to ensure it is firmly seated.
  - » If moisture, corrosion, or damage is found:
    - Clean and dry the socket connector, or change it if necessary.

### Difficult operating conditions are:

- Sand
- Dust
- Wet or muddy roads
- Temperatures above +40 °C
- Temperatures below -10 °C


\_

## 9.1 Checks and maintenance measures when preparing for use



### Note

Before every trip, check the condition of the vehicle and ensure that it is roadworthy. The vehicle must be in perfect technical condition when it is being operated.

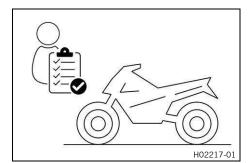

- Check the engine oil level. (p. 122)
- Check the brake fluid level for the front brake. (p. 87)
- Check the brake fluid level for the rear brake. (p. 91)
- Check that the brake pads of the front brake are secured.
   (p. 89)
- Check that the brake pads of the rear brake are secured.
   (p. 93)
- Check that the brake system is functioning properly.
- Check the coolant level. (p. 114)
- Check the chain for dirt. (p. 75)
- Check the chain tension. (p. 76)
- Check the tire condition. (p. 99)
- Check the tire pressure. (p. 100)
- Check the settings of all controls and ensure that they can be operated smoothly.
- Check that the electrical equipment is functioning properly.
- Check that luggage is properly secured.
- Sit on the motorcycle and check the rear mirror setting.
- Check the fuel level.
- In dusty operating conditions: check the air filter box and air filter.

### 9.2 Starting



### **DANGER**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.



### WARNING

**Danger of accidents** Electronic components and safety devices will be damaged if the 12-V battery is discharged or missing.

If the 12-V battery is discharged or defective, malfunctions in the vehicle electronics can occur, especially when starting.

Never operate the vehicle with a discharged 12-V battery or without a 12-V battery.



### NOTE

**Engine failure** Unfiltered intake air has a negative effect on the service life of the engine.

Dust and dirt can enter the engine if there is no air filter or if the air filter is mounted incorrectly.

Only operate the vehicle if an air filter is correctly fitted.




### NOTE

**Engine failure** Running a cold engine at high engine speeds negatively impacts the service life of the engine.

Always warm up the engine at low engine speeds.

# 9 Riding instructions

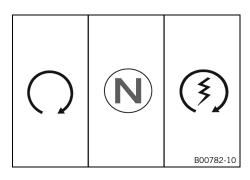

- Unlock steering. (p. 19)
- Sit on the vehicle, take the weight off of the side stand, and move it all the way up with your foot.
- Press the kill switch into position ().
- Switch on the ignition by turning the ignition key to position

   .

To avoid malfunctions in the control unit communication, do not switch the ignition off and on in rapid succession.

- ✓ After you switch on the ignition, you can hear the fuel pump working for about two seconds. The function check of the combination instrument is run at the same time.
- Shift the transmission into the neutral position.
  - ✓ The green idle indicator lamp **N** lights up.
  - ✓ The ABS warning light lights up and goes out again after starting off.
- Briefly press start button (3).

Do not press the start button until the combination instrument function check has finished.

Do not open the throttle to start.

If the starting attempt is unsuccessful, wait for 15 seconds before making another attempt at starting.

After 6 unsuccessful starting attempts, do not try again, and check the vehicle for other malfunctions instead.



#### Note

This motorcycle is equipped with a safety starting system.

You can only start the engine if the transmission is in neutral or if the clutch lever is pulled when a gear is engaged.

If the side stand is folded out and you shift into gear and release the clutch lever, the engine stops.

4

### 9.3 Starting off


 Pull the clutch lever, shift into first gear, release the clutch lever slowly and at the same time carefully open the throttle.



### Tip

If the engine dies while starting off, only pull the clutch lever and press the start button. The transmission must not be shifted into neutral.

## 9.4 Quickshifter+ (optional)

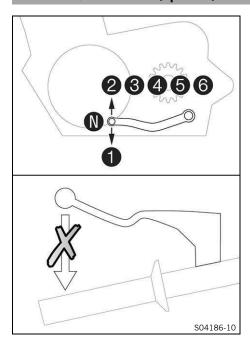

If the **QUICKSHIFTER+** is activated, you can shift up and down without actuating the clutch.

Because there is no need to close the throttle grip, uninterrupted gear shifts are possible.

The QUICKSHIFTER+ uses the shift shaft position to check whether or not a shift should be initiated, and sends a corresponding signal to the engine control unit.

If the QUICKSHIFTER+ is disabled in the combination instrument, the clutch needs to be actuated in the normal way for each shift.

## 9.5 Shifting, riding



### WARNING

Danger of accidents Abrupt load alterations can cause the vehicle to become out of control.

Avoid abrupt load alterations and sudden braking actions unless a hazardous situation arises.



### WARNING

Danger of accidents If you downshift at high engine speed, the rear wheel blocks and the engine races.

- Do not downshift to a lower gear at high engine speeds.



### WARNING

**Danger of accidents** An incorrect ignition key position causes malfunctions.

Do not change the ignition key position while riding.



### **WARNING**

**Danger of accidents** Adjustments to the vehicle distract attention from traffic activity.

Make all adjustments when the vehicle is at a standstill.



#### WARNING

**Risk of injury** The passenger may fall from the vehicle if they act incorrectly.

 Ensure that the passenger sits correctly on the passenger seat, places his or her feet on the passenger foot pegs and holds on to the rider or the grab handles.



#### WARNING

**Danger of accidents** Not adapting the riding style constitutes a major risk.

 Comply with traffic regulations and ride defensively and with foresight to detect sources of danger as early as possible.



#### WARNING

Danger of accidents Cold tires have reduced road grip.

 Ride the first miles carefully on every journey at moderate speed until the tires reach operating temperature.



### WARNING

Danger of accidents New tires have reduced road grip.

The contact surface on new tires is not yet roughened.

- Run in new tires with moderate riding and only gradually increase the lean angle.

Run-in distance	200 km
	(124.3 mi)



#### WARNING

Danger of accidents Total weight and axle loads influence the handling characteristic.

The total weight consists of: operational vehicle with a full tank, rider and, if applicable, a passenger with protective clothing and helmet, and, if applicable, mounted luggage.

Do not exceed the maximum permissible total weight or the axle loads.



### WARNING

**Danger of accidents** Improper mounting of cases, tank rucksacks or other luggage impairs the handling characteristics.

Luggage mounted incorrectly can slip while the vehicle is in motion.

- Mount and secure all luggage according to the manufacturer's instructions.
- Check that your luggage is fixed properly at regular intervals.



#### WARNING

**Danger of accidents** A fall can damage the vehicle more seriously than it may first appear.

- Check the vehicle after a fall as you do when preparing for use.



### NOTE

**Engine failure** Overheating damages the engine.

- If the coolant temperature warning is displayed, stop immediately and take care not to endanger your-self or other traffic participants in the process.
- Allow the engine and cooling system to cool down.
- Check and, if necessary, correct the coolant level on the cooling system while it is in a cooled state.



#### NOTE

**Transmission damage** Incorrect use of the QUICKSHIFTER+ will damage the transmission.

The QUICKSHIFTER+ can only be used if the function is enabled in the combination instrument.


The QUICKSHIFTER+ is not active if you pull the clutch lever.

- Only use the QUICKSHIFTER+ in the permitted speed range shown.



### Note

If unusual noises occur while riding, stop immediately (taking care not to endanger yourself or other road users in the process), switch off the engine and contact an authorized KTM workshop.

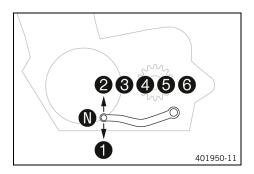

- Shift into a higher gear when conditions allow (incline, road situation, etc.).
- Release the throttle while simultaneously pulling the clutch lever, shift into the next gear, release the clutch lever, and open the throttle.

# i

### Note

The gear positions can be seen in the figure. The idle position is between the first and second gears. First gear is used for starting off or for steep inclines.

- After reaching maximum speed by fully opening the throttle twist grip, turn the throttle back so that it is <sup>3</sup>/<sub>4</sub> open. This will reduce the speed slightly, but the fuel consumption will be considerably lower.
- Accelerate only up to a speed suitable for the road surface and weather conditions. In particular, you should not change gear on bends and should only accelerate very cautiously.
- Brake if necessary and close the throttle at the same time in order to shift down.
- Pull clutch lever and shift into a lower gear, release the clutch lever slowly, and open the throttle or shift again.
- Switch off the engine if you are likely to be running at idle speed or stationary for a long time.
- If the engine stalls (e.g. at an intersection), just pull the clutch lever and press the start button. The transmission must not be shifted into neutral.
- If the oil pressure warning lamp | lights up during a trip, stop as soon as it is safe to do so and switch off the engine.
   Contact an authorized KTM workshop.
- If the malfunction indicator lamp lights up during a trip, please contact an authorized KTM workshop as soon as possible.
- If the general warning lamp lights up during a trip, an operating safety (warning) message was detected.




#### Note

All warnings which have occurred are displayed and stored in the **Warning** menu until these are no longer active.


 If the QUICKSHIFTER+ (optional) is activated in the combination instrument, you can shift up in the engine speed range indicated without pulling the clutch lever.

Pull the shift lever to the stop quickly without changing the throttle twist grip position.

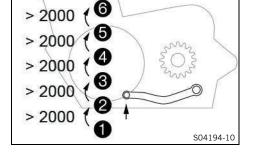

The minimum engine speed in rpm before shifting up is shown in the figure.

# **9** Riding instructions

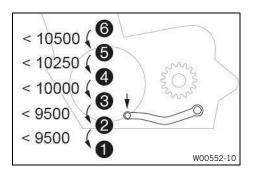

 If the QUICKSHIFTER+ is activated in the combination instrument, you can shift down in the engine speed range shown without pulling the clutch lever.

Press the shift lever to the stop quickly without changing the throttle twist grip position.



#### Note

The maximum engine speed in rpm before shifting down is shown in the figure.

### 9.6 Braking



### WARNING

**Danger of accidents** Moisture and dirt impair the brake system.

Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.



#### WARNING

**Danger of accidents** A spongy pressure point on the front or rear brake reduces the brake action.

Do not drive the vehicle if the brake system has a spongy pressure point.



#### WARNING

Danger of accidents The brake system fails in the event of overheating.

If the brake pedal is not released, the brake pads grind continuously.

Take your foot off the brake pedal when you are not braking.



#### WARNING

**Danger of accidents** Higher total weight increases the stopping distance.

- Take the longer stopping distance into account when carrying a passenger or luggage with you.



### WARNING

**Danger of accidents** Salt on the roads impairs the brake system.

- Brake carefully several times to remove salt from the brake linings and the brake discs.



### WARNING

**Danger of accidents** ABS may increase the stopping distance in certain situations.

- Adapt your braking to the riding situation and the road conditions.
- When braking, release the throttle and apply the front and rear brakes at the same time.



#### Note

When the **ABS** is enabled, maximum braking power can be applied even on surfaces with low road grip such as sandy, wet, or slippery terrain without the danger of the wheels locking.



### WARNING

Danger of accidents 
The rear wheel can lock due to the engine braking effect.

- Pull the clutch when performing emergency braking or braking on slippery surfaces.



#### WARNING

Danger of accidents Banked or laterally sloping ground reduces the maximum possible delay.

- If possible finish braking before going into a bend.
- Always finish braking before you go into a bend. Shift into a lower gear that suits the speed.
- Use the brake action of the engine on long downhill stretches. Shift down one or two gears, but do not overrev
  the engine when doing so. This means that significantly less braking is required and means the brake system
  does not overheat.

•

### 9.7 Stop, park



### WARNING

**Risk of injury** People who act without authorization endanger themselves and others.

- Never leave the vehicle unattended while the engine is running.
- Lock the steering and remove the ignition key if you leave the vehicle unattended.



### WARNING

**Danger of burns** Some vehicle components become hot when the vehicle is operated.

- Do not touch any parts such as the exhaust system, radiator, engine, damper, or brake system before the vehicle parts have cooled down.
- Allow the vehicle parts to cool down before performing any work on the vehicle.



#### NOTE

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.



#### NOTE

**Fire hazard** Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.
- Brake the motorcycle.
- Shift the transmission into the neutral position.



#### Note

If the engine is switched off with the emergency OFF switch and the ignition remains switched on in the ignition lock, the power supply to most electrical power consumers remains uninterrupted and this discharges the 12-V battery. You should therefore always switch off the engine with the ignition lock – the kill switch is intended for emergencies only.

- Park the motorcycle on a firm surface.
- Swing side stand forward with your foot as far as it will go and lean the vehicle on it.
- Lock the steering. (p. 19)

•

## 9.8 Transport



### NOTE

**Material damage** The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.


- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.



### NOTE

Fire hazard Hot vehicle components pose a fire hazard and explosion risk.

- Do not park the vehicle near materials which are highly flammable or explosive.
- Allow the vehicle to cool down before covering it.

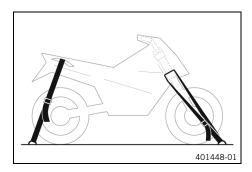

- Switch off the engine and remove the ignition key.
- Use tension belts or other suitable devices to secure the motorcycle against falling over or rolling away.


### 9.9 Towing in the event of a breakdown



### NOTE

**Danger of damage** Damage to the powertrain and transmission can occur when towing with a towing vehicle.

- Do not use towing equipment where the wheels of the broken down vehicle remain on the road and rotate as it is towed.
- Always transport a broken down vehicle on a trailer or on the loading area of a transport vehicle.

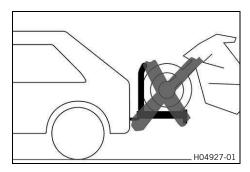

- Ensure that the broken down vehicle is properly secured on the trailer or transport vehicle.
- Observe local regulations for the recovery of broken down vehicles.

### 9.10 Refueling



### **DANGER**

**Fire hazard** Fuel is highly flammable.

The fuel in the fuel tank expands when warm and can escape if overfilled.

- Do not refuel the vehicle in the vicinity of open flames, glowing, or smoldering objects.
- Make sure that nobody smokes in the vicinity of the vehicle during the refueling process.
- Switch off the engine for refueling.
- Make sure that no fuel is spilled; particularly not on hot parts of the vehicle.
- If any fuel is spilled, wipe it up immediately.
- Do not overfill the fuel tank.



### **WARNING**

Danger of poisoning Fuel is harmful to health.

- Do not allow fuel to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if fuel has been ingested.
- Do not inhale fuel vapors.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if fuel comes into contact with eyes.
- If fuel spills on to your clothing, change the clothing.
- Store fuel properly in a suitable container and keep out of the reach of children.



### NOTE

**Environmental hazard** Improper handling of fuel is dangerous to the environment.


Do not allow fuel to enter the groundwater, the soil, or the sewage system.




### NOTE

Material damage Inadequate fuel quality can lead to losses in performance and consequential damage.

- Refuel only with clean fuel that meets the specified standards.

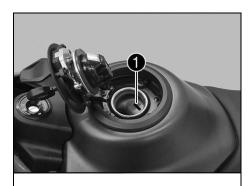

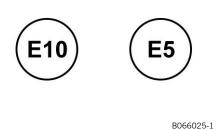

- Switch off the engine.
- Open the fuel tank cap. (p. 19)
- Fill the fuel tank with fuel up to the lower edge of the filler neck.

Total fuel tank capacity, approx.				
(All except BR models) Super unleaded (ROZ 95) (p. 148)	9 I (2.4 liq. gal <sub>US</sub> )			
(BR model) Super unleaded, type C (ROZ 95/RON 95/PON 91) (p. 148)				

- Close the fuel tank cap. 🗐 (p. 20)

## 10.1 Service work

Any further work that results from the service work must be ordered separately and invoiced separately. Different service intervals may apply in your country, depending on the local operating conditions. Individual service intervals and scopes may change in the course of technical developments. The most up-to-date service schedule is available for authorized dealers for the electronic proof of service. Your authorized dealer will be happy to advise you.

\* In dusty operating conditions: check the air filter regularly and replace if necessary.

				y 48		iths
			r <b>y 2</b> 4		ıths	
F 00 000 l		ry 12		ıths		
Every 20,000 km ( Every 10,000 km (6,2	-		MI)			
After 1,000 km (621.4		 				
Read out the fault memory using the diagnostics tool.	0	•	•	•	•	•
Program the shift shaft sensor.	0	•	•			
Check that the electrical equipment is functioning properly.	0	•	•	•	•	•
Check that the brake pads of the front brake are secured. (p. 89)	0	•	•	•	•	•
Check that the brake pads of the rear brake are secured. (p. 93)	0	•	•	•	•	•
Check the brake discs. (p. 86)	0	•	•	•	•	•
Check the brake lines for damage and tightness.	0	•	•	•	•	•
Check the brake fluid level for the front brake. (p. 87)	0	•	•	•		
Change the brake fluid for the front brake.					•	•
Check the brake fluid level for the rear brake.	0	•	•	•		
Change the brake fluid for the rear brake.					•	•
Change the engine oil and the oil filter, clean the oil screens. 🌂 🗐 (p. 122)	0	•	•	•	•	•
Check all hoses (e.g. fuel, cooling, bleeder, drainage, etc.) and boots for cracking, leaks, and correct routing.	0	•	•	•	•	•
Empty the drainage hoses.	0	•	•	•	•	•
Check the cables for damage and that there are no kinks in the routing.	0	•	•	•	•	•
Check the frame.			•			
Check the swingarm.			•			
Check the swingarm bearing for play.		•	•			
Check the steering head bearing play.	0	•	•			
Check the wheel bearing for play.		•	•			
Check the shock absorber and fork for leaks. 🔌	0	•	•	•	•	•
Check the tire condition. (p. 99)	0	•	•	•	•	•
Check the tire pressure. [3] (p. 100)	0	•	•	•	•	•
Check the rim run-out.	0	•	•			
Retighten the spokes. 🔏	0					
Check the spoke tension. [2] (p. 100)		•	•			
Check the chain, rear sprocket, and engine sprocket. (p. 78)		•	•	•	•	•

			Eve	y 48	mon	ths
		Eve	ry 24	mor	ıths	
		-	? mor	nths		
Every 20,000 km (			mi)			
Every 10,000 km (6,2		mi)				
After 1,000 km (621.4						
Check the chain tension. (p. 76)	0	•	•	•	•	•
Grease all moving parts (e.g. side stand, hand lever, chain, etc.) and check for smooth operation.	0	•	•	•	•	•
Check that the clutch cables are undamaged, routed without kinks, and set correctly.	0	•	•	•	•	•
Check the valve clearance, change the spark plug.			•			
Change the air filter, clean the air filter box. * 🔌		•	•			
Check the headlight setting. (p. 110)	0	•	•			
Check the tightness of the safety-relevant screws and nuts which are easily accessible.	0	•	•	•	•	•
Clean the dust boots of the fork legs. (p. 74)		•	•			
Check that the radiator fan is functioning properly.	0	•	•	•	•	•
Check the coolant level. (p. 114)	0	•	•	•	•	
Checking the antifreeze.		•	•		•	
Change the coolant. 🔌 📖 (p. 117)						•
Final check: Check the vehicle is roadworthy and take a test ride. 🔌	0	•	•	•	•	•
Read out the fault memory after the test ride using the diagnostics tool.	0	•	•	•	•	•
Set the service interval display. 🔌	0	•	•	•	•	•
Enter electronic proof of service.	0	•	•	•	•	•

- o One-time interval
- Periodic interval

## 11.1 Adjusting the spring preload of the shock absorber 🔌



### WARNING

**Danger of accidents** Modifications to the suspension settings that are not properly coordinated can impair the handling and overload components.

- Only make adjustments within the recommended range.
- Ride slowly to start with after making adjustments to get the feel of the new handling characteristics.



### Note

The spring preload defines the initial status of the spring operation on the shock absorber.


The best spring preload setting is achieved when it is set for the weight of the rider and that of any luggage and a passenger, thus ensuring an ideal compromise between handling and stability.

### **Preparatory work**

Remove the right side cover. (p. 80)

### Adjustment procedure

Adjust the spring preload by turning at adjusting device using the hook wrench from the tool set.

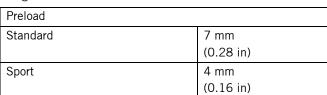

Hook wrench (90529077000)
Extension for hook wrench (90129099025)



#### Note

The spring preload can be set to 10 different positions.

### Reworking


Install the right side cover. (p. 80)

## 11.2 Adjusting the shift lever



### Note

The adjustment range of the shift lever is limited.

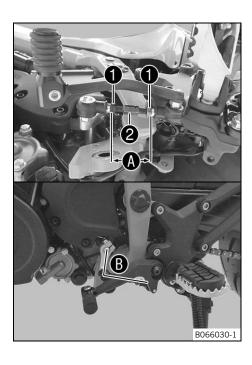

- Loosen nuts 1.
- Adjust the shift lever by turning shift rod 2.

Shift rod adjustment range (A) 90 mm ... 102 mm (3.54 in ... 4.02 in)

Make the same adjustments on both sides.

At least five screw threads must be screwed into the seating.

Check adjusting angle **B**.

Adjusting angle <b>B</b> shift rod - bell	90°
crank - shift lever	(1.57 rad)

– Tighten nuts **1**.

After the nuts have been tightened, the bearings of the shift rod must be central and aligned identically to each other in order to ensure freedom of movement in the bearing shells.

 Check the shift lever to ensure it is functioning properly and can move freely.

## 12.1 Raising the motorcycle with rear lifting gear




### NOTE

**Material damage** The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

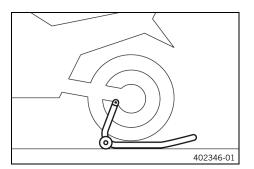

- Mount the supports of the lifting gear.
- Insert the adapter in the rear lifting gear.

Retaining adapter (61029955244)

Rear wheel work stand (69329955000)

 Stand the motorcycle upright, align the lifting gear with the link fork and the adapters, and raise the motorcycle.

## 12.2 Removing the rear of the motorcycle from the lifting gear




### **NOTE**

Material damage The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

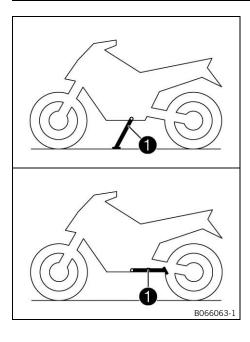

- Secure the motorcycle against falling over.
- Remove the rear lifting gear and lean the vehicle on side stand 1.
- Remove bushings kit.

•

#### 12.3 Lifting the motorcycle with the front lifting gear



#### NOTE

**Material damage** The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

#### Preparatory work

- Raise the motorcycle with the rear lifting gear. (p. 72)
- Remove the front top fender. (p. 79)

#### Installation procedure


- Move the handlebar to the straight-ahead position.
- Position the lifting gear.

Always raise the motorcycle at the rear first.

Mounting pin (69329965030)

Front wheel work stand, large (69329965100)

Lift the motorcycle at the front.

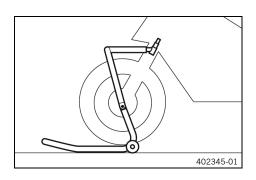

#### 12.4 Taking the motorcycle off the front lifting gear



#### NOTE

**Material damage** The vehicle may be damaged if parked incorrectly.

Damage can occur if the vehicle rolls away or falls over.

The components for parking the vehicle are designed only for the weight of the vehicle.

- Park the vehicle on a firm and level surface.
- Make sure that nobody sits on the vehicle when it is parked on a stand.

# 402777-01

#### Removal process

- Secure the motorcycle against falling over.
- Remove the front lifting gear.

#### Reworking

- Remove the rear of the motorcycle from the lifting gear.
   (p. 72)
- Install the front top fender. (p. 79)

4

#### 12.5 Cleaning the dust boots of the fork legs

#### Preparatory work

- Raise the motorcycle with the rear lifting gear. (p. 72)
- Remove the front top fender. (p. 79)
- Lift the motorcycle with the front lifting gear.
   (p. 73)

#### **Cleaning process**

Push dust boot 1 downward on both fork legs.



#### Note

The dust boots remove dust and coarse dirt particles from the inside fork tubes.

Over time, dirt can accumulate behind the dust boots. If this dirt is not removed, the oil seals behind can start to leak



#### **WARNING**

**Danger of accidents** Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.
- Clean and oil the dust boots and the inner fork tube of both fork legs.


Universal oil spray 🗐 (p. 149)

- Press the dust boots back into their installation position.
- Remove excess oil.

#### Reworking

- Take the motorcycle off the front lifting gear. (p. 73)
- Remove the rear of the motorcycle from the lifting gear.
   (p. 72)
- Install the front top fender. (p. 79)

12.6 Removing the seat

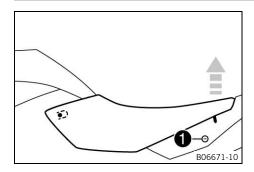


- Insert the ignition key in seat lock 

   and turn it clockwise.
- Raise the rear of the seat, pull it towards the rear, and remove it upwards.


74

# 12.7 Mounting the seat

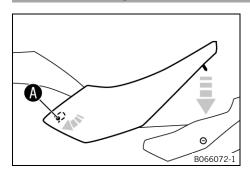

- Attach the front seat in area f A and lower at the rear.
- Check that the seat is correctly mounted.

#### 12.8 Checking the chain for dirt

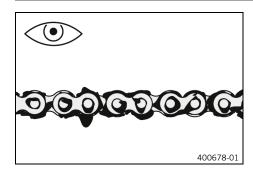

- Check the chain for coarse dirt accumulation.
  - » If the chain is very dirty:
    - Clean the chain. (p. 75)

#### 12.9 Cleaning the chain



#### WARNING

Danger of accidents Lubricants on the tires reduces the road grip.

- Remove lubricants from the tires using a suitable cleaning agent.



#### WARNING

Danger of accidents Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



#### NOTE

**Environmental hazard** Hazardous substances cause environmental damage.

 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




#### Note

The service life of the chain depends largely on its maintenance.

#### **Preparatory work**

Raise the motorcycle with the rear lifting gear.

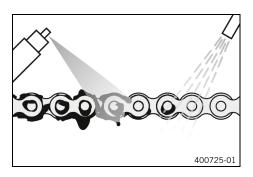

#### Cleaning process

- Clean the chain regularly.
- Rinse off the loose dirt with a gentle jet of water.
- Remove grease residue with chain cleaner.

Chain cleaner (p. 153)

After drying, apply chain spray.

Street chain spray (p. 149)

#### Reworking

- Remove the rear of the motorcycle from the lifting gear. (p. 72)

#### 12.10 Checking the chain tension



#### WARNING

Danger of accidents Incorrect chain tension can damage components and result in an accident.

If the chain is tension is too high, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.

- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.


#### Preparatory work

Raise the motorcycle with the rear lifting gear.
 (p. 72)


#### Control process

Shift the transmission into the neutral position.

In the area after the chain sliding guard, press the chain upward toward the link fork and measure chain tension A.

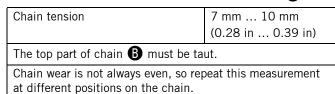

- » If the chain tension does not meet the specification:
  - Adjust the chain tension. (p. 77)
- Remove the rear of the motorcycle from the lifting gear.
   (p. 72)

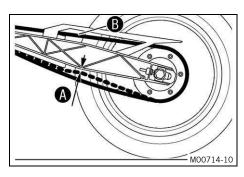

#### 12.11 Adjusting the chain tension



#### WARNING

Danger of accidents Incorrect chain tension can damage components and result in an accident.

If the chain is tension is too high, the chain, front sprocket, rear sprocket, transmission, and rear wheel bearings wear more quickly. Some components may break if overloaded.

If the chain is too loose, the chain may fall off the front sprocket or the rear sprocket. This can damage the rear wheel or the engine.


- Check the chain tension regularly.
- Set the chain tension in accordance with the specification.

#### **Preparatory work**

- Raise the motorcycle with the rear lifting gear. (p. 72)
- Check the chain tension. (p. 76)

#### Adjustment procedure

- Loosen nut 1.
- Loosen nuts 2.
- Adjust the chain tension by turning adjusting screws **3** on the left and right.

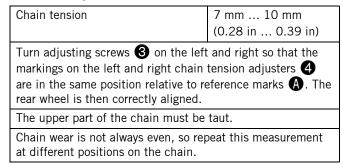


- Tighten nuts 2.
- Make sure that chain tension adjusters 4 are fitted correctly on adjusting screws 3.
- Tighten nut 1.

Nut, wheel spindle, rear	
M16	100 Nm
	(73.8 ft·lb <sub>f</sub> )

- Grease the thread and contact surface of the wheel spindle.

#### Reworking

Remove the rear of the motorcycle from the lifting gear.
 (p. 72)

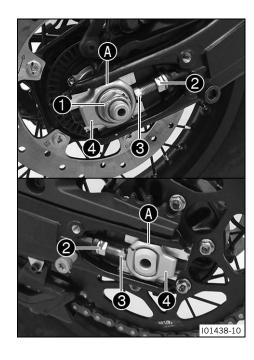

#### 12.12 Checking the chain, rear sprocket, and engine sprocket


#### Preparatory work

Raise the motorcycle with the rear lifting gear.
 (p. 72)

#### **Control process**

- Check the rear sprocket and the engine sprocket for wear.
  - » If the rear sprocket and engine sprocket are worn:
    - Change the drivetrain kit. 🔌

The front sprocket, rear sprocket, and chain should always be replaced together.

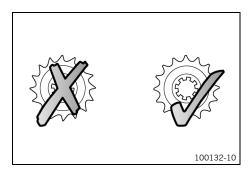

- Shift the transmission into the neutral position.
- Pull on the lower chain section with specified weight (A).



Maximum distance <b>(B)</b> from 20 chain rollers at the longest chain section	301.6 mm (11.874 in)
Chain wear is not always even, so repeat this measurement at different positions on the chain.	


- » If distance **B** is greater than the specified measurement:
  - Change the drivetrain kit.


When you replace the chain, you should also replace the rear sprocket and front sprocket.



#### Note

New chains wear out faster on old, worn sprockets.

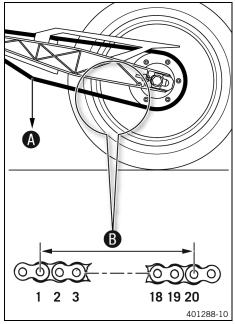

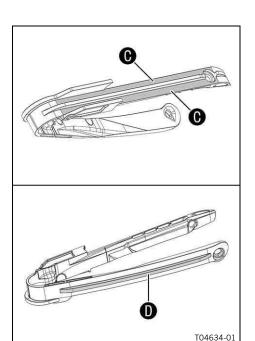


- Check the chain slider at the top for wear.
  - » If continuous signs of wear to the chain are visible on the chain sliding guard in the area ① marked:
    - Change the chain slider.
  - » If the chain slider is highly worn on the underside in the marked area  $\mathbf{0}$ :
    - Change the chain slider.
- Check that the chain slider is firmly seated.
  - » If the chain slider is loose:
    - Tighten the screw of the chain sliding guard.

Screw, chain guard	
M6	9 Nm
	(6.6 ft⋅lb <sub>f</sub> )

#### Reworking


Remove the rear of the motorcycle from the lifting gear.
 (p. 72)

#### 12.13 Removing the front top fender

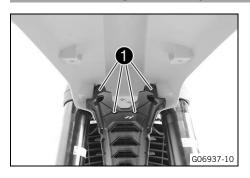

- Remove 1 screws.
- Remove the front fender.

# 12.14 Installing the front top fender

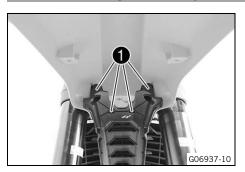


- Position the front fender.
- Mount and tighten screws 1.


Screw, front fender on triple clamp	
M6	6 Nm
	(4.4 ft⋅lb <sub>f</sub> )

79

# 12.15 Removing the right side cover

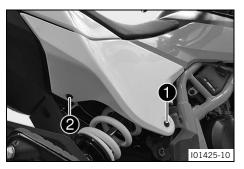


- Remove screw 1.
- Remove push/pull captive panel screw 2.

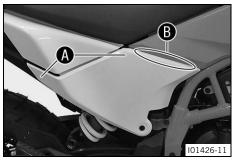


- Remove the side fairing from rubber bushings  $oldsymbol{\mathbb{A}}$  and detach it from area  $oldsymbol{\mathbb{B}}$ .

#### 12.16 Installing the right side cover

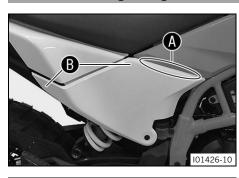

Attach side fairing in area and press it into rubber bushings .

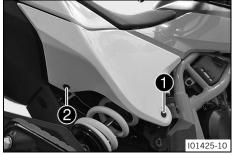

Mount and tighten screw ①.

Side cover screw	
M6	7 Nm
	(5.2 ft⋅lb <sub>f</sub> )

Mount push/pull captive panel screw 2.

4


# 12.17 Removing right fuel tank cover 🔌

#### **Preparatory work**


- Remove the seat. (p. 74)
- Remove the right side cover. (p. 80)

#### Removal process


- Remove 1 screws.
- Remove the fairing from rubber bushing  $oldsymbol{A}$  and take it off.

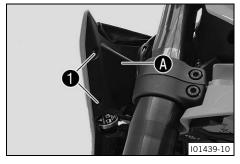


- Remove screws 2 and 3.
- Remove screws 4 and 5.
- Remove the fuel tank fairing from rubber bushings B, detach it from area and take it off.

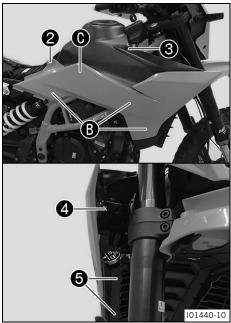

# 12.18 Installing the right fuel tank cover 🔌

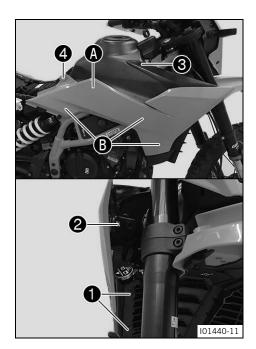

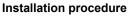

- Attach fuel tank fairing in area and press it into rubber bushings .
- Mount and tighten screws 1.

Fuel tank cover screw	
M6	6 Nm
	(4.4 ft·lb <sub>f</sub> )


Mount and tighten screw 2.

Remaining screws on chassis	
M6	9 Nm
	(6.6 ft⋅lb <sub>f</sub> )

- Mount and tighten screw 3.

Fuel tank cover screw	
M6	6 Nm
	(4.4 ft⋅lb <sub>f</sub> )

- Mount and tighten screw  $oldsymbol{4}$  .

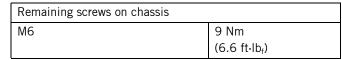

- Press the fairings into rubber bushing **(6)**.
- Mount and tighten screws 6.

Fuel tank cover screw	
M6	6 Nm
	(4.4 ft⋅lb <sub>f</sub> )




#### Reworking

- Install the right side cover. (p. 80)
- Mount the seat. (p. 75)

4

# 12.19 Adjusting the basic position of the clutch lever

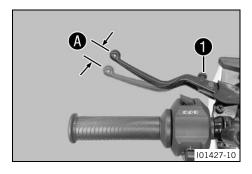

- Adjust the basic position of the clutch lever to your hand size by turning adjusting wheel 1.
- Push the clutch lever forward and turn the adjusting wheel until a suitable position is reached in area (A).

Do not make any adjustments while riding.


#### 12.20 Checking the play in the clutch lever



#### NOTE

**Clutch damage** If there is no free travel by the clutch lever, the clutch will slip.

- Check the free travel of the clutch lever each time before using the vehicle.
- Adjust the free travel of the clutch lever when necessary in accordance with the specification.

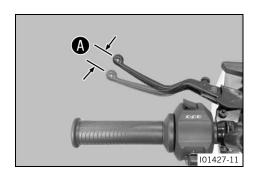

- Check the clutch lever for smooth operation.
- Move the handlebar to the straight-ahead position.
- Pull the clutch lever until resistance is perceptible, and determine the play in the clutch lever (A).


Clutch lever play **(A)** 1 mm ... 3 mm (0.04 in ... 0.12 in)

- » If the play in the clutch lever does not meet the specified value:
  - Adjust play in the clutch lever. (p. 84)
- Move the handlebar back and forth over the entire steering range.

The clutch lever play must not change.

- » If the clutch lever play changes:
  - Check the routing of the clutch cable.

# 12.21 Adjusting play in the clutch lever 🔌

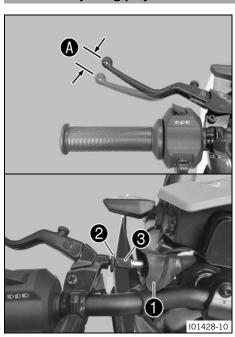


- Move the handlebar to the straight-ahead position.
- Push back boot 1.
- Loosen lock nut 2.
- Adjust the play in the clutch level by turning adjusting screw 3.

Clutch lever play (A)	1 mm 3 mm
	(0.04 in 0.12 in)

- Tighten lock nut 2.
- Position bellows 1.

#### 13.1 Anti-lock braking system

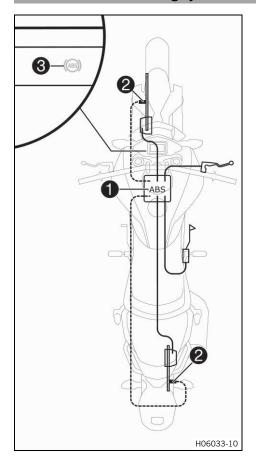



#### WARNING

**Danger of accidents** Changes to the vehicle impair the function of the ABS.

- Do not make any changes to the suspension travel.
- Only use spare parts on the brake system which have been approved and recommended by the vehicle manufacturer.
- Only use tires and wheels approved and recommended by the vehicle manufacturer with the corresponding speed rating.
- Maintain the specified tire pressure.
- Ensure that service work and repairs are performed professionally.

The **ABS** is a safety system that prevents the wheels locking when driving straight ahead or when cornering (within the limits of physics).



#### WARNING

**Danger of accidents** Driving aids can reduce the probability of a fall only within physical limits.

It is not always possible to compensate for certain riding situations, for example with luggage loaded with a high center of gravity, varying road surfaces, steep descents or full braking without disengaging the gear.

Adapt your riding style to the road conditions and your driving ability.



#### WARNING

**Danger of accidents** An incorrectly selected ABS mode makes it more difficult to control the vehicle.

The ABS modes are each only suitable for certain conditions.

 Always select an ABS mode that suits the ground and the riding situation.

The **ABS** module ①, which consists of a hydraulic unit, ABS control unit, and return pump, is installed under the fuel tank. One wheel speed sensor ② is located in each case on the front and the rear wheel.

The ABS control is dependent on the riding mode. ABS has two operating modes: the **Road** and **Offroad** ABS modes.

In ABS mode Road, ABS controls both wheels.

In ABS mode **Offroad**, there is no ABS control on the rear wheel.



#### Note

The curve dependent control is only active in ABS mode  ${f Road}.$ 

The ABS operates with two independent brake circuits (front and rear brakes). When the ABS control unit detects a locking tendency in a wheel, ABS begins regulating the brake pressure. The

control function causes a slight pulsing of the hand and foot brake

The ABS warning light **3** must light up after the ignition is switched on and go out after starting off. If it does not go out after starting off or if it is lit while riding, this indicates a fault in the ABS. In this case, the ABS is no longer enabled and the wheels may lock during braking. The brake system itself stays functional; only ABS control is not available.

The ABS warning light may also light up if the rotating speeds of the front and rear wheels differ greatly under extreme riding conditions, for example when doing a wheelie or if the rear wheel spins. This causes the ABS to switch off.

To reactivate the ABS, stop the vehicle and switch off the ignition. The ABS is reactivated when the vehicle is switched on again. The ABS warning light goes out after starting off.


#### 13.2 Checking the brake discs



#### WARNING

Danger of accidents Worn-out brake discs reduce the braking action.

Make sure that worn-out brake discs are replaced immediately.

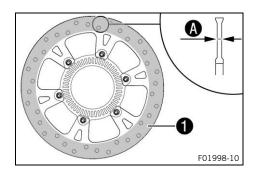

Check the brake disc thickness of the front and rear brake disc at several places on the disc to see if they conform to measurement A.

Brake disc wear limit	
front	4.5 mm
	(0.177 in)
rear	4.5 mm
	(0.177 in)



#### Note

Wear will reduce the thickness of the brake disc at contact surface **1** of the brake linings.


- If the brake disc thickness is less than the specified value.
  - Change the brake discs of the front brake.
  - Change the brake discs on the rear brake.



- Check the front and rear brake discs for damage, cracks, and deformation.
  - If the brake disc shows signs of damage, cracks, or defor-
    - Change the brake discs of the front brake.
    - Change the brake discs on the rear brake.



#### 13.3 Adjusting the basic position of the hand brake lever

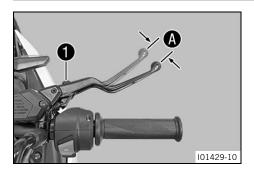

- Adjust the basic position of the hand brake lever to your hand size by turning adjusting wheel 1.
- Push the hand brake lever forward and turn the adjusting wheel until a suitable position is reached in area A.

Do not make any adjustments while riding.

•

#### 13.4 Checking the brake fluid level for the front brake



#### WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.


 Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



#### WARNING

**Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.

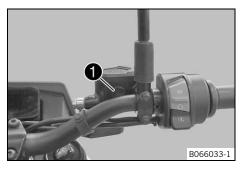

- Move the brake reservoir mounted on the handlebar to a horizontal position.
- Check the brake fluid level in sight glass ①.
- » If the brake fluid level is below the **MIN** marking:
  - Add brake fluid for the front brake.
     (p. 87)

13.5 Adding brake fluid for the front brake



#### WARNING

**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



#### WARNING

**Health hazard** Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



#### WARNING

**Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.



#### **NOTE**

**Environmental hazard** Hazardous substances cause environmental damage.

 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.




#### Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

#### **Preparatory work**

Check that the brake pads of the front brake are secured.
 (p. 89)



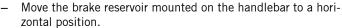




Take off cover 2 with diaphragm 3.




Add brake fluid up to level A.

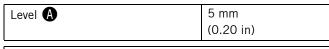

Brake fluid DOT 4 / DOT 5.1 (p. 150)

- Position the cover with diaphragm.
- Mount and tighten the screws.

Immediately clean up any brake fluid that has overflowed or spilled with water.

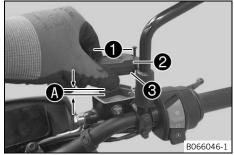

#### 13.6 Checking that the brake pads of the front brake are secured



#### WARNING

Danger of accidents Worn brake pads reduce the brake action.

- Make sure that worn brake pads are replaced immediately.




#### WARNING

**Danger of accidents** Damaged brake discs reduce the braking action.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the brake action is greatly reduced and the brake discs are destroyed.

Check the brake linings regularly.

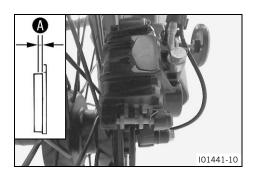

Check all brake pads on both brake calipers for their lining thickness A.

Minimum pad thickness A ≥ 1 mm  $(\ge 0.04 in)$ 

- If it is less than the minimum thickness:
  - Change the front brake pads.



- If there is damage or cracking:
  - Change the front brake pads.



- Check that the brake pads are secured.
  - If the brake pads are not secured correctly:
    - Secure brake pads, replace with new parts if necessary.

#### 13.7 Checking the free travel of the brake pedal




#### WARNING

**Danger of accidents** The brake system fails in the event of overheating.

If there is no free travel on the brake lever, pressure builds up in the brake system.

Set the free travel on the brake lever as specified.

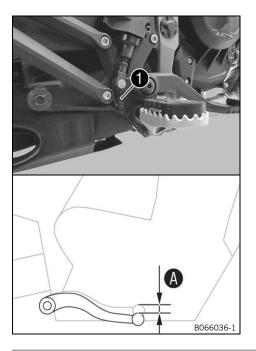

- Detach spring 1.
- Move the brake pedal back and forth between the end stop and the brake pedal cylinder piston and check free travel (A).

Free travel of brake pedal	3 mm 5 mm
	(0.12 in 0.20 in)

- » If the free travel does not meet the specifications:
  - Adjust the free travel of the foot brake lever.
     (p. 90)



#### Note

Have this carried out in an authorized KTM workshop.

Attach spring 1.

•

# 13.8 Adjusting the free travel of the foot brake lever 🔌




#### **WARNING**

**Danger of accidents** The brake system fails in the event of overheating.

F00847-11

If there is no free travel on the brake lever, pressure builds up in the brake system.

Set the free travel on the brake lever as specified.

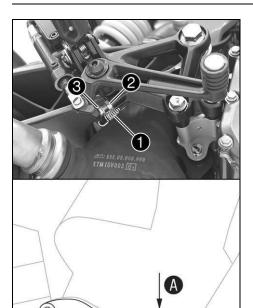

- Detach spring •
- Release nut 2 and use screw 3 to adjust the specified free travel A.

Free travel of brake pedal 3 mm ... 5 mm (0.12 in ... 0.20 in)



#### Note

The range of adjustment is limited.

This setting is not for adjusting the ergonomics.

- Hold screw 3 and tighten nut 2.
- Attach spring ①.

•

#### 13.9 Checking the brake fluid level for the rear brake



#### WARNING

**Danger of accidents** An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.


 Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



#### WARNING

**Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.

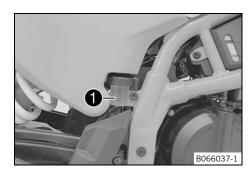

- Stand the vehicle upright.
- Check the brake fluid level in the brake fluid reservoir.
  - If the fluid level reaches the MIN marking 1:
    - Add brake fluid for the rear brake.
       (p. 91)





#### WARNING

Danger of accidents An insufficient brake fluid level will cause the brake system to fail.

If the brake fluid level drops below the specified marking or the specified value, the brake system has a leak or the brake pads are worn down.

 Have the brake system checked and make sure that the problem has been eliminated before the vehicle is used again.



#### WARNING

**Health hazard** Brake fluid is a harmful substance.

- Keep brake fluid out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Do not allow brake fluid to come into contact with the skin, the eyes, or clothing.
- Consult a doctor immediately if brake fluid has been ingested.
- Rinse the affected area with plenty of water in the event of contact with the skin.
- Rinse eyes thoroughly with water immediately and consult a doctor if brake fluid comes into contact with the eyes.
- If brake fluid spills on to your clothing, change the clothing.



#### WARNING

**Danger of accidents** Brake fluid which is too old or of the wrong type impairs the function of the brake system.

- Make sure that brake fluid for the front and rear brake is changed in accordance with the service schedule.
- Make sure that only clean, approved brake fluid from a tightly sealed container is used.

#### NOTE

**Environmental hazard** Hazardous substances cause environmental damage.

Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



#### Note

Avoid contact between brake fluid and painted parts. Brake fluid corrodes paint.

#### Preparatory work


Check that the brake pads of the rear brake are secured. (p. 93)

#### Filling procedure

Condition: Screw cap is locked

Remove screw and take off screw cap lock a.



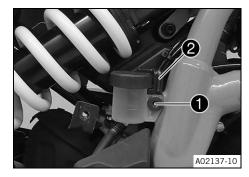


- Stand the vehicle upright.
- Remove screw cap 3 with membrane 4.
- Add brake fluid to mark **A**.

Brake fluid DOT 4 / DOT 5.1 (p. 150)


Mount the screw cover with the membrane.


Immediately clean up any brake fluid that has overflowed or spilled using water.

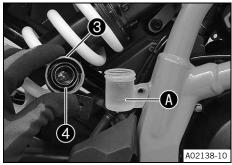

Condition: Screw cap is locked

Position screw cap lock 2 and mount and tighten screw 1.

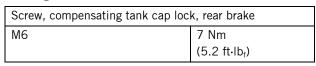

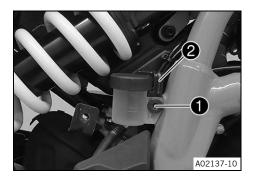

#### 13.11 Checking that the brake pads of the rear brake are secured



#### **WARNING**

**Danger of accidents** Worn brake pads reduce the brake action.

- Make sure that worn brake pads are replaced immediately.




#### WARNING

**Danger of accidents** Damaged brake discs reduce the braking action.

If the brake linings are not changed in time, the brake lining carriers grind against the brake disc. As a consequence, the brake action is greatly reduced and the brake discs are destroyed.

- Check the brake linings regularly.

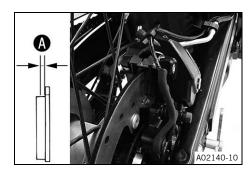

Check all brake pads on both brake calipers for their lining thickness A.

Minimum pad thickness A ≥ 1 mm (≥ 0.04 in)

- If it is less than the minimum thickness:
  - Change the rear brake pads.
- Check the brake linings for damage and cracking.
  - If there is damage or cracking:
  - Change the rear brake pads.
- Check that the brake pads are secured.
- If the brake pads are not secured correctly:
  - Secure brake pads, replace with new parts if necessary.


# 14.1 Removing the front wheel 🔌


#### Preparatory work

- Raise the motorcycle with the rear lifting gear. (p. 72)
- Remove the front top fender. (p. 79)
- Lift the motorcycle with the front lifting gear. (p. 73)

#### Removal process

Remove screw 1 and pull wheel speed sensor 2 out of the hole.

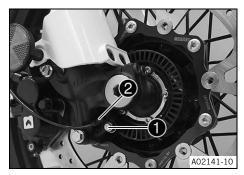

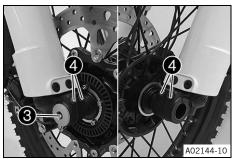

- Loosen screw 3 by four turns.
- Loosen screws 4.
- Press on screw 3 to push the wheel spindle out of the fork shoe
- Remove screw 3.

# A


#### WARNING

**Danger of accidents** Damaged brake discs reduce the braking action.

- Always lay the wheel down in such a way that the brake disc is not damaged.
- Hold front wheel and remove wheel spindle. Take the front wheel out of the fork.

Do not actuate the hand brake lever when the front wheel is removed.

Remove spacers 6.

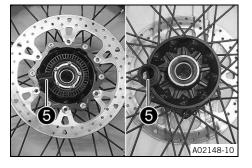


#### 14.2 Installing the front wheel



#### **WARNING**

**Danger of accidents** Oil, grease or wax on the brake discs reduces the brake action.

- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.

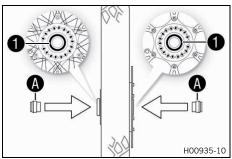



#### Installation procedure


- Check the wheel bearing for damage and wear.
  - If the wheel bearing is damaged or worn:
    - Change the front wheel bearing.



- Remove the spacers.
- Clean and grease radial shaft seal 1 and contact surfaces A on the spacers.


Long-life grease (p. 149)

Insert spacers.

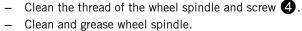


Long-life grease (p. 149)

- Position the front wheel and insert the wheel spindle.
  - ✓ The brake pads are positioned correctly.
- Mount and tighten screw 4.

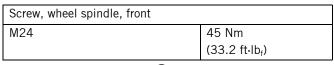


- Position wheel speed sensor 3 in the hole.
- Mount and tighten screw 2.

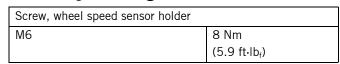

- Operate the hand brake lever repeatedly until the brake pads are in contact with the brake disc and a pressure point is
- Take the motorcycle off the front lifting gear. (p. 73)
- Remove the rear of the motorcycle from the lifting gear.
- Operate the front brake and compress the fork a few times firmly.
  - ✓ The fork legs straighten.
- Tighten screws **5**.

Screw, fork shoe	
M8	15 Nm
	(11.1 ft·lb <sub>f</sub> )

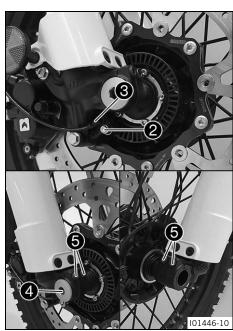

#### Reworking

Install the front top fender. (p. 79)

# 14.3 Removing the rear wheel 🔌

#### Preparatory work

Raise the motorcycle with the rear lifting gear. (p. 72)

#### Removal process

- Remove screw 1 and pull wheel speed sensor 2 out of the hole.
- Remove nut 3 and washer.
- Remove chain tension adjuster 4.
- Holding the rear wheel, withdraw wheel spindle 6 with the washer and chain adjuster 6.
- Push the rear wheel forward as far as possible and take the chain off the rear sprocket.
- Carefully push the brake caliper support to the side.

Do not damage the brake line.



#### WARNING

**Danger of accidents** Damaged brake discs reduce the braking action.

- Always lay the wheel down in such a way that the brake disc is not damaged.
- Pull the rear wheel back and take it out of the link fork.

Do not actuate the brake pedal when the rear wheel is removed.

#### 14.4 Installing the rear wheel



#### WARNING

**Danger of accidents** Oil, grease or wax on the brake discs reduces the brake action.


- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



#### WARNING

**Danger of accidents** There is no braking effect to start with at the rear brake after installing the rear wheel.

Actuate the foot brake several times before going on a ride until you can feel a firm pressure point.

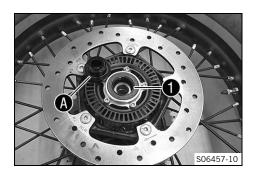

#### Installation procedure

- Check the wheel bearing for damage and wear.
  - » If the wheel bearing is damaged or worn:
    - Change the rear wheel bearing.
- Remove the spacers.
- Clean and grease radial shaft seal 1 and contact surfaces 1 on the spacers.

Long-life grease (p. 149)

- Clean the thread of the wheel spindle and axle nut.
- Clean and grease wheel spindle.


Long-life grease (p. 149)

- Clean the contact areas on the brake caliper bracket and link fork
- Mount the damping rubber and rear sprocket carrier on the rear wheel.
- Position the rear wheel.
  - ✓ Brake pads and brake caliper brackets are correctly positioned.
- Push the rear wheel forward as far as possible and lay the chain on the rear sprocket.
- Position the chain guard.
- Pull the rear wheel back and mount wheel spindle **3** with the washer and chain adjuster **4**.

Mount left and right chain adjusters **4** in the same position.


- Mount nut 2 and the washer.
- Push the rear wheel forward so that the chain adjusters are in contact with the screws, and tighten nut 2.

In order for the rear wheel to be correctly aligned, the markings on the left and right chain adjusters must be in the same position relative to reference markings **B**.

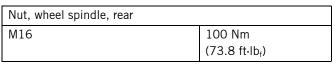

- Position wheel speed sensor 6 in the hole.
- Mount and tighten screw 6.

Screw, wheel speed sensor holder	
M6	8 Nm
	(5.9 ft⋅lb <sub>f</sub> )

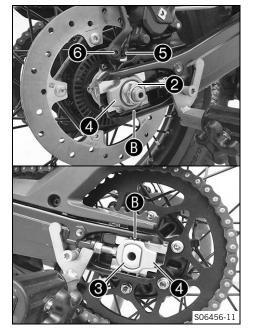

#### Reworking

- Check the chain tension. (p. 76)
- Remove the rear of the motorcycle from the lifting gear.
   (p. 72)

#### 14.5 Checking the rear hub damping rubber pieces 🔌



#### Note

The engine power is transmitted from the rear sprocket to the rear wheel via the six damping rubber pieces. They eventually wear out during operation. If the damping rubber pieces are not changed in time, the rear sprocket carrier and the rear hub will be damaged.


#### **Preparatory work**

- Raise the motorcycle with the rear lifting gear. (p. 72)
- Remove the rear wheel.
   Image: Part of the part of th



#### **Control process**

- Check bearing ①.
  - » If the bearing is damaged or worn:
    - Change the bearings.
- Check damping rubber pieces 2 of the rear hub for damage and wear.
  - » If the damping rubber pieces of the rear hub are damaged or worn:
    - Change all the damping rubber pieces of the rear hub.

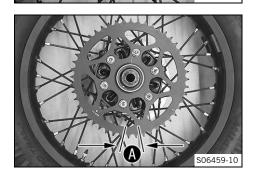

- Lay the rear wheel on a workbench with the rear sprocket facing upward and insert the wheel spindle in the hub.
- To check play A, hold the rear wheel tight and try to rotate the rear sprocket.

Play of damping rubber pieces on	≤ 5 mm
rear wheel	(≤ 0.20 in)



#### Note

Measure the play on the outside of the rear sprocket.

- » If clearance (A) is larger than the specified value:
  - Change all the damping rubber pieces of the rear hub.

#### Reworking

- Install the rear wheel. 🔌 🚉 (p. 96)
- Check the chain tension. (p. 76)
- Remove the rear of the motorcycle from the lifting gear.
   (p. 72)

#### 14.6 Checking the tire condition



#### WARNING

Danger of accidents If a tire bursts while riding, the vehicle becomes uncontrollable.

- Ensure that damaged or worn tires are replaced immediately.



#### WARNING

Danger of accidents Different tire profiles on the front and rear wheels can make it more difficult to control the vehicle.

Make sure that only tires of the same tread type are mounted to the front and rear wheel.




#### WARNING

Danger of accidents Non-approved or non-recommended tyres and wheels impact the handling characteristic.

Only use tires and wheels approved and recommended by the vehicle manufacturer with the corresponding speed rating.



The type, condition, and pressure of the tires all have a major impact on the handling of the motorcycle. Worn tires have a negative effect on handling characteristics, especially on wet surfaces.

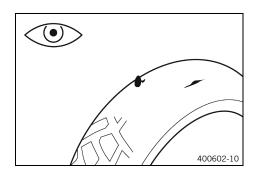


- Check the front and rear tires for cuts, embedded objects, and other damage.
  - If the tires have cuts, run-in objects, or other damage:
    - Change the tires.
- Check the tread depth.


Minimum tread depth	≥ 2 mm
	(≥ 0.08 in)




Observe the minimum tread depth required by national

- If the tread depth is less than the minimum tread depth:
  - Change the tires.

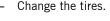

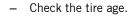

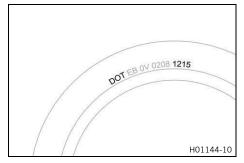



#### Note

The tire date of manufacture is usually contained in the tire label and is indicated by the last four digits of the DOT number. The first two digits indicate the week of manufacture and the last two digits the year of manufacture.

KTM recommends that the tires be changed after 5 years at the latest, regardless of the actual state of wear.


- If the tires are older than five years:
  - Change the tires.

#### 14.7 Checking the tire pressure



#### Note

Low tire pressure leads to abnormal wear and the tire overheating. Correct tire pressure ensures optimal riding comfort and maximum tire service life.

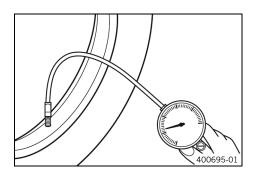

- Remove the protection cap.
- Check the tire pressure when the tires are cold.

Tire pressure when solo	
front	2.0 bar (29.0 psi)
rear	2.0 bar (29.0 psi)

Tire pressure with passenger / full payload	
front	2.0 bar
	(29.0 psi)
rear	2.2 bar
	(31.9 psi)

- If the tire pressure does not meet specifications:
  - Correct tire pressure.
- Mount the protection cap.

#### 14.8 Checking the spoke tension




#### WARNING

Danger of accidents 
Incorrectly tensioned spokes impair the handling characteristic and can result in secondary damage.

If the spokes are too tight, they can break due to being overloaded.

Loose spokes can cause lateral or radial run-out in the wheel and other spokes will loosen as a result.

Check the spoke tension regularly, especially on a new vehicle.

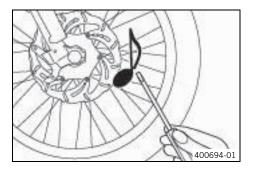

Briefly tap each spoke with a screwdriver.

You should hear a high-pitched sound.



#### Note

The frequency of the sound depends on the spoke length and spoke diameter.

If spokes of the same length and diameter vibrate with a different tone, this is an indication that the spoke tensions differ.

- If the spoke tension differs:
  - Correct the spoke tension.



# 15.1 Removing the 12 V battery 🔌




#### **WARNING**

**Risk of injury** Battery acid and battery gases cause chemical burns.


- Keep 12–V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.


#### **Preparatory work**

- Remove the seat. (p. 74)

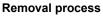


Remove battery cover  $oldsymbol{\mathbb{A}}$ .

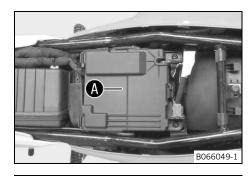

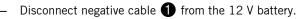

- Pull back positive terminal cover 2.
- Disconnect positive cable 3 from the 12-V battery.
- Pull the 12-V battery upwards and out of the battery compartment.

Never operate the motorcycle with a discharged 12-V battery or without a 12-V battery.

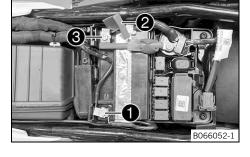




#### Note


In both cases, electrical components and safety devices can be damaged.

The vehicle will therefore no longer be roadworthy.

4

# 15.2 Installing the 12 V battery

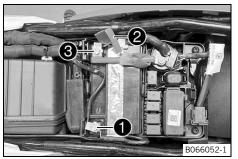

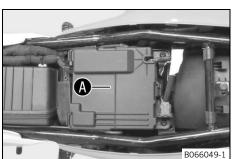

#### Installation procedure

- Position the 12-V battery in the battery compartment.

12 V battery (ETZ-9-BS) (p. 151)

- Position positive cable 3 and mount and tighten the screw.
- Position positive terminal cover 2.
- Position negative cable 1 and mount and tighten the screw.

Mount battery cover A.

#### Reworking

- Mount the seat. (p. 75)
- Set the time and date. (p. 51)

# 15.3 Charging the 12 V battery 🔌



#### WARNING

Risk of injury Battery acid and battery gases cause chemical burns.

- Keep 12-V batteries out of the reach of children.
- Wear suitable protective clothing and safety glasses.
- Avoid contact with battery acid and battery gases.
- Keep sparks or open flames away from the 12 V battery.
- Only charge 12 V batteries in well-ventilated rooms.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes with water for at least 15 minutes and consult a doctor immediately if battery acid and battery gases get into the eyes.



#### NOTE

**Environmental hazard** 12–V batteries contain environmentally-hazardous materials.

- Do not dispose of 12-V batteries as household waste.
- Dispose of 12-V batteries at a collection point for used batteries.



#### **NOTE**

**Environmental hazard** Hazardous substances cause environmental damage.

 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

#### Note

Even when there is no load on the 12-V battery, it discharges steadily each day.

The state of charge and the method of charging are very important for the service life of the 12 V battery. Rapid recharging with a high charging current shortens the service life of the battery.

If the charging current, charging voltage, or charging time is exceeded, electrolyte escapes through the safety valves. This reduces the capacity of the 12-V battery.

If the 12-V battery is left in a discharged state for an extended period, it will become deeply discharged and sulfating occurs, destroying the battery.

The 12 V battery is maintenance-free. The acid level does not have to be checked.

#### **Preparatory work**

- Remove the seat. (p. 74)
- Disconnect the negative cable of the 12-V battery to avoid damage to the onboard electronics.

#### Filling procedure

 Connect a charger to the 12 V battery. Connect the battery charger to the mains connection.

Charge the 12-V battery to a maximum of 10 % of the capacity specified on the battery housing.

EU battery charger **TecMATE Optimate PRO** (A61029974044)

USA/CA battery charger **TecMATE Optimate PRO** (A61029974144)

Battery charger **TecMATE Optimate PRO** UK (A61029974244)



S06148-01

#### Note

It is impossible to overcharge the 12-V battery using this battery charger.



#### Note

This battery charger is not suitable for lithium-ion batteries.

- Switch off the charger after charging and disconnect from the 12 V battery.

The charging current, charging voltage, and charging time must not be exceeded.

Recharge the 12 V battery regularly when the motorcycle is not being used.

3 months

If the 12 V battery is depleted from starting the vehicle repeatedly, the battery must be charged immediately.

- Position the negative cable and mount and tighten the screw.

#### Reworking

- Mount the seat. (p. 75)
- Set the time and date. (p. 51)

4



#### 15.4 Changing the main fuse



#### WARNING

Fire hazard Incorrect fuses overload the electrical system.

- Use only fuses with the prescribed amperage.
- Do not bypass or repair fuses.



#### Note

The main fuse protects all electrical power loads of the vehicle. The main fuse is under the seat.


#### Preparatory work

- Remove the seat. (p. 74)

#### Replacement process

Remove battery cover **A**.



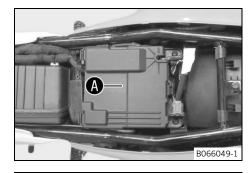

Remove protection cap 1.



Remove faulty main fuse 2.





A faulty fuse has a burned-out fuse wire **B**. A spare fuse is located in the fuse box.


Insert the main fuse.

Fuse (75011088030) (p. 152)




#### Tip

Put a spare fuse in the fuse box so that it is available if needed.

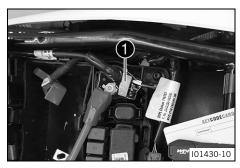

Mount protection cap 1.

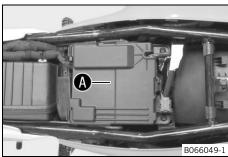

Install battery cover A.

#### Reworking

- Mount the seat. (p. 75)
- Set the time and date. (p. 51)

# 15.5 Changing the ABS fuses



#### WARNING

Fire hazard Incorrect fuses overload the electrical system.

- Use only fuses with the prescribed amperage.
- Do not bypass or repair fuses.



#### Note


Two fuses for the ABS are located under the seat.

These fuses protect the return pump and the hydraulic unit of the ABS.

The third fuse, which protects the ABS control unit, is located in the fuse box.

#### **Preparatory work**


- Remove the seat. (p. 74)

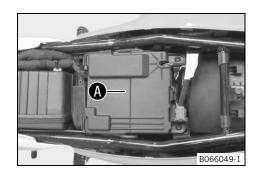

#### Replacement process

Remove battery cover (A).



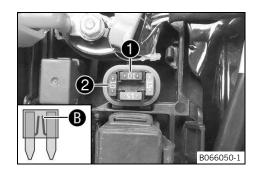

#### Changing the fuse of the ABS hydraulic unit

Take off the protection cap and remove fuse 1.





A faulty fuse has a burned-out fuse wire **B**.





#### WARNING

Fire hazard Incorrect fuses overload the electrical system.

- Use only fuses with the prescribed amperage.
- Do not bypass or repair fuses.
- Insert the spare fuse with the correct rating.

Fuse (75011088010) (p. 151)



#### Tip

Insert spare fuse **2** in the fuse box so that it is available

# Changing the fuse of the ABS return pump


Take off the protection cap and remove fuse 3.





A faulty fuse has a burned-out fuse wire **B**.



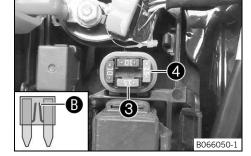

# WARNING

Fire hazard Incorrect fuses overload the electrical system.


- Use only fuses with the prescribed amperage.
- Do not bypass or repair fuses.
- Insert the spare fuse with the correct rating.

Fuse (90111088025) (p. 152)



Insert spare fuse 4 in the fuse box so that it is available if needed.

Mount the protection cap.

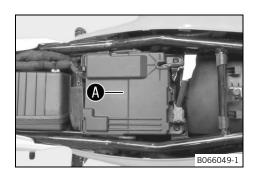

Install battery cover A.

#### Reworking

Mount the seat. (p. 75)

# 15.6 Changing the fuses of individual electrical power consumers



#### Note


The fuse box with the main fuse and the fuses of the individual electrical power consumers is located under the seat.


#### Preparatory work

Remove the seat. (p. 74)

#### Replacement process

Remove battery cover A.

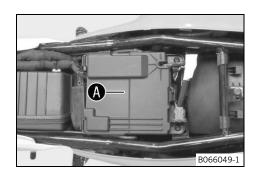

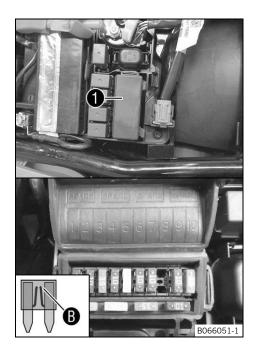

Open fuse box cover 1.

#### (BR model)

- Remove the faulty fuse.

Fuse 1 - 30 A - main fuse
Fuse <b>2</b> - 10 A - combination instrument
Fuse <b>3</b> - 10 A - power relay

Fuse 4 - 15 A - ignition coil, fuel pump, start auxiliary relay, horn

Fuse 5 - 15 A - radiator fan

Fuse 6 - 15 A - brake light, turn signal, high beam, low beam, position light, tail light, license plate lamp

Fuse 7 - 10 A - engine control unit, ABS control unit

Fuse 8 - 10 A - alarm system (optional)

Fuse 9 - 10 A - permanent positive for accessories (AC-C1)

Fuse 10 - 10 A - ignition positive for auxiliary equipment (ACC2)

Fuse **SPARE** - 10 A/15 A/30 A - spare fuses



#### Note

A faulty fuse has a burned-out fuse wire **B**.



#### (All except BR models)

Remove the faulty fuse.

Fuse 1-10 A - combination instrument, brake light, high beam, tail light

Fuse 2 - 10 A - combination instrument

Fuse 3 - 15 A - main relay

Fuse 4 - 10 A - start auxiliary relay, horn

Fuse 5 - 20 A - radiator fan

Fuse 7 - 10 A - engine control unit, ABS control unit, Connectivity Unit

Fuse 8 - not assigned

Fuse 9 - 10 A - permanent positive for accessories (AC-

Fuse 10 - 10 A - ignition positive for accessories (ACC2),

Fuse **SPARE** - 10 A/15 A/20 A/30 A - spare fuses



#### Note

A faulty fuse has a burned-out fuse wire **B**.





#### WARNING

Fire hazard Incorrect fuses overload the electrical system.

- Use only fuses with the prescribed amperage.
- Do not bypass or repair fuses.
- Insert the spare fuse with the correct rating.


Fuse (75011088010) (p. 151) Fuse (75011088015) (p. 152) Fuse (75011088020) (p. 152) Fuse (75011088030) (p. 152)



#### Tip

Put a spare fuse in the fuse box so that it is available if needed.


- Check the function of the electrical power consumer.
  - Close the fuse box cover 1.
- Install battery cover (A).

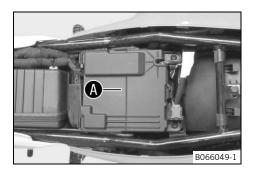

#### Reworking

Mount the seat. (p. 75)

#### 15.7 Checking the headlight setting

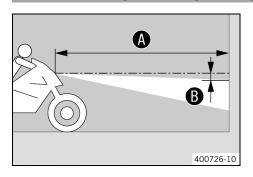

- Park the vehicle on a horizontal surface in front of a lightcolored wall and make a mark at the height of the center of the low beam headlight.
- Make another mark at a distance 
   B under the first marking.

Distance <b>B</b>	5 cm
	(2.0 in)

- Position the vehicle upright at distance **(A)** from the wall and switch on the low beam.

Distance A	5 m
	(16 ft – 5 in)

- Get on the motorcycle, together with any luggage or passenger.
- Check the headlight adjustment.

The light-dark boundary must lie exactly on the lower marking when the motorcycle is ready to operate with the rider mounted along with any luggage and a passenger if applicable.

- » If the boundary between light and dark does not meet specifications:
  - Adjust headlight range. (p. 110)


15.8 Adjusting the headlight range

Preparatory work


- Check the headlight setting. (p. 110)

Adjustment procedure


Loosen screw 1.

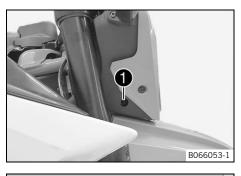


Set the headlight to marking **B**.

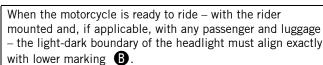

Tighten screw 1.

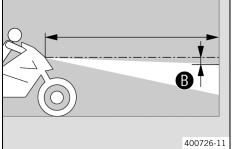

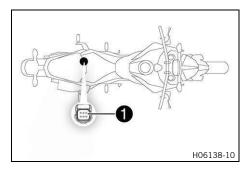

Diagnostics connector is located under the seat.


A diagnostic adapter for connection to a cross-manufacturer diagnostic interface has been connected at the factory.

# i

#### Note

Unplug the diagnostics adapter to use the diagnostic tool. Following completion of the diagnosis, plug the diagnostics adapter back in.


#### 15.10 Front ACC1 and ACC2

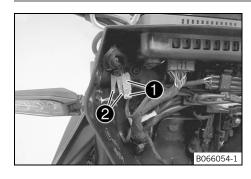

#### **Installation location**

The ACC1 1 and ACC2 2 power supplies are located behind the headlight mask.


#### 15.11 Rear ACC1 and ACC2

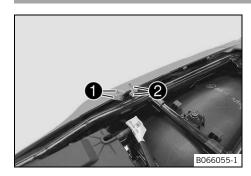

#### **Installation location**

• The ACC1 and ACC2 power supplies are located at the rear below the seat.


#### 16.1 Cooling system

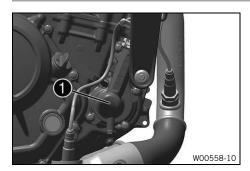

Water pump 1 in the engine circulates the coolant.

The pressure resulting from the warming of the cooling system is regulated by a valve in radiator cap ②. Heat expansion causes excess coolant to flow into compensating tank ③. When the temperature falls, this surplus coolant is sucked back into the cooling system. This ensures that operating the vehicle at the specified coolant temperature will not result in a risk of malfunctions.

110 °C (230.0 °F)

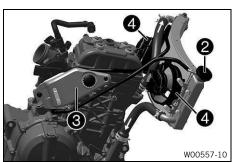

The coolant is cooled by the air stream and two radiator fans **4**, which are activated at high temperature.

The lower the vehicle speed, the lower the cooling effect. Dirty cooling fins also reduce the cooling effect.



#### Note

If the cooling system overheats, the maximum engine speed is limited

#### 16.2 Checking the frost protection and coolant level



#### WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



#### WARNING

**Health hazard** Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

#### Preparatory work

- Remove the seat. (p. 74)
- Remove the right side cover. (p. 80)
- Remove right fuel tank cover.
   (p. 81)

# B066056-1


#### **Control process**


- Stand the motorcycle upright on a level surface.
- Remove cap 1 of the compensating tank.
- Check the frost protection in the coolant.

- » If the frost protection in the coolant does not match the specified value:
  - Correct the frost protection in the coolant.
- Check the coolant level in the compensating tank.

The coolant level must be between the two markings.

- » If the coolant level does not meet the specifications:
  - Correct the coolant level.

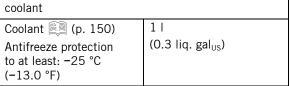

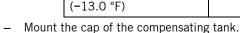






- » If the frost protection in the coolant does not match the specified value:
  - Correct the frost protection in the coolant.
- Check the coolant level in the radiator.

The radiator must be filled completely.

- » If the coolant level does not meet the specifications:
  - Check the coolant level and the reason for the loss.

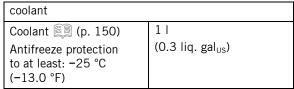

» If you had to add more coolant than the specified amount: > 0.20 I


 $(> 0.053 \text{ liq. gal}_{US})$ 

- Fill/bleed the cooling system. ዺ 🗐 (p. 115)

Mount the radiator cap.

#### Reworking

- Install the right fuel tank cover. 
   (p. 82)
- Install the right side cover. (p. 80)
- Mount the seat. (p. 75)

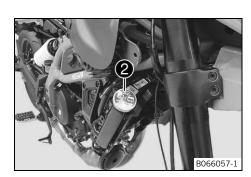

#### 16.3 Checking the coolant level



#### WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



#### WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

#### Preparatory work

- Remove the seat. (p. 74)
- Remove the right side cover. (p. 80)
- Remove right fuel tank cover. 🔌 🗐 (p. 81)



#### **Control process**


- Stand the motorcycle upright on a level surface.
- Check the coolant level in compensating tank 1.



The coolant level must be between the two markings.

- If the coolant level does not meet the specifications:
  - Correct the coolant level.

coolant	
Coolant (p. 150)	1
Antifreeze protection	(0.3 liq. gal <sub>US</sub> )
to at least: −25 °C	
(−13.0 °F)	

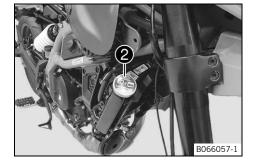

Remove radiator cap 2 and check the coolant level in the

The radiator must be filled completely.

- If the coolant level does not meet the specifications:
  - Check the coolant level and the reason for the loss.
- If you had to add more coolant than the specified amount: > 0.20 |
  - $(> 0.053 \text{ liq. gal}_{US})$
  - Fill/bleed the cooling system.

     (p. 115)
- Mount the radiator cap.

#### Reworking

- Install the right fuel tank cover.
- Install the right side cover. (p. 80)
- Mount the seat. (p. 75)

#### 16.4 Draining the coolant 🔌



#### WARNING

Danger of scalding The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.




#### WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.

Condition: The engine is cold

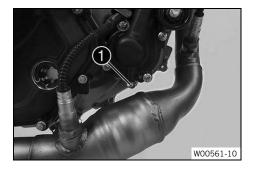

- Stand the motorcycle upright.
- Position an appropriate container under the engine.
- Remove screw 1 with the seal ring.
- Remove the radiator cap.
- Completely drain the coolant.
- Mount screw 1 with the new sealing ring and tighten.

Screw plug, water pump drain hole	
M6	11 Nm
	(8.1 ft⋅lb <sub>f</sub> )
	Loctite® 243

16.5 Filling/bleeding the cooling system 🔌



#### WARNING

Health hazard Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.

- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.


#### **Preparatory work**


- Remove the seat. (p. 74)
- Remove the right side cover. (p. 80)
- Remove right fuel tank cover. (p. 81)

#### Filling procedure

Remove radiator cap 1.



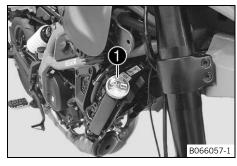

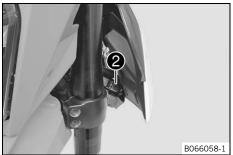

Loosen bleeder screw 2.



3 turns (1,080°)

- Tilt the vehicle slightly to the right.
- Pour in the coolant until it emerges without bubbles at the bleeder screw, and then mount and tighten the bleeder screw immediately.

coolant	
Coolant (p. 150) Antifreeze protection to at least: -25 °C (-13.0 °F)	1 I (0.3 liq. gal <sub>US</sub> )


- Completely fill the radiator with coolant.
- Mount the radiator cap.
- Rest the vehicle on the side stand.



#### **DANGER**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and allow it to warm up.

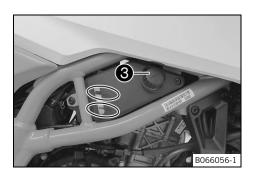

- Stop the engine and allow it to cool down.
- When the engine is cool, check the coolant level in the radiator and, if necessary, add coolant.
- Remove cap 3 of the compensating tank and top up the coolant level up to the MAX marking.
- Mount the cap of the compensating tank.

#### Reworking

- Install the right fuel tank cover. 🔌 🗐 (p. 82)
- Install the right side cover. (p. 80)
- Mount the seat. (p. 75)

# 16.6 Changing the coolant 🔌



#### WARNING

**Danger of scalding** The coolant heats up and is under high pressure when the vehicle is operated.

- Do not open the radiator, the radiator hoses, or other cooling system components if the engine or the cooling system are at operating temperature.
- Allow the cooling system and the engine to cool down before you open the radiator, the radiator hoses, or other components of the cooling system.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



#### **WARNING**


**Health hazard** Coolant is harmful to health.

- Keep coolant out of the reach of children.
- Do not allow coolant to come into contact with skin, eyes, or clothing.
- Consult a doctor immediately if coolant has been ingested.
- Rinse the affected area immediately with plenty of water in the event of contact with skin.
- Rinse eyes thoroughly with water and consult a doctor immediately if coolant comes into contact with eyes.
- If coolant spills on to your clothing, change the clothing.
- Store coolant properly in a suitable container and keep out of the reach of children.


Condition: The engine is cold

#### **Preparatory work**

- Remove the seat. (p. 74)
- Remove the right side cover. (p. 80)
- Remove right fuel tank cover. 4 (p. 81)

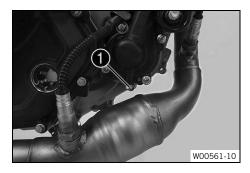



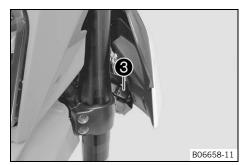

#### Replacement process

- Stand the motorcycle upright.
- Position an appropriate container under the engine.
- Remove screw 1 with the seal ring.
- Remove radiator cap 2.
- Completely drain the coolant.
- Mount screw **1** with the new sealing ring and tighten.

Screw plug, water pump drain hole	
M6	11 Nm
	(8.1 ft⋅lb <sub>f</sub> )
	Loctite® 243

Loosen bleeder screw 3.



3 turns (1,080°)

- Tilt the vehicle slightly to the right.
- Pour in the coolant until it emerges without bubbles at the bleeder screw, and then mount and tighten the bleeder screw immediately.

coolant	
Coolant (p. 150)	1
Antifreeze protection to at least: -25 °C (-13.0 °F)	(0.3 liq. gal <sub>us</sub> )

- Completely fill the radiator with coolant.
- Mount the radiator cap.
- Rest the vehicle on the side stand.



#### **DANGER**

Danger of poisoning Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and allow it to warm up.



- Stop the engine and allow it to cool down.
- When the engine is cool, check the coolant level in the radiator and, if necessary, add coolant.
- Remove cap 4 of the compensating tank and top up the coolant level up to the MAX marking.
- Mount the cap of the compensating tank.

#### Reworking

- Install the right fuel tank cover. 🔌 🗐 (p. 82)
- Install the right side cover. (p. 80)
- Mount the seat. (p. 75)

119

#### 17.1 Ride Mode



Condition	Meaning
Street	Homologated performance with balanced response; the motorcycle traction control allows normal slip on the rear wheel.
Offroad	Homologated performance with very direct response; the motorcycle traction control allows greater slip on the rear wheel.



#### WARNING

**Danger of accidents** An incorrectly selected ride mode makes it more difficult to control the vehicle. The riding modes are each only suitable for certain conditions.

 Always select a riding mode that suits the surface on which you are riding, the weather and the riding situation.

Vehicle tunings Street and Offroad can be selected in the dashboard in submenu Ride Mode .

The most recently selected ride mode appears on the display.

The riding mode can also be changed while riding with the throttle grip closed.

### 17.2 Motorcycle traction control (optional)

The motorcycle traction control (MTC) (optional) lowers the engine torque in case of loss of traction in the rear wheel. Depending on the <u>riding mode</u>, different amounts of slip are allowed when traction control is activated.



#### Note

When motorcycle traction control is switched off, the rear wheel may spin during strong acceleration and on surfaces with low grip, resulting in a risk of falling.

After the ignition is switched on, motorcycle traction control is enabled again.



In the combination instrument, the motorcycle traction control can be switched on or off via the **MTC** submenu (optional).



#### Note

When the motorcycle traction control is active, the TC indicator lamp (a) flashes.

When motorcycle traction control is switched off, the TC indicator lamp (a) lights up.

#### 18.1 Checking the engine oil level

Condition: The engine is at operating temperature

#### **Preparatory work**


- Stand the motorcycle upright on a level surface.

#### **Control process**

Check the engine oil level.

The engine oil must be between the **(A)** and **(B)** markings. After switching off the engine, wait one minute before checking the level.

- » When the engine oil level is below the f A marking:
  - Add engine oil. (p. 124)
- » When the engine oil level is above the **B** marking:
  - Correct the engine oil level.

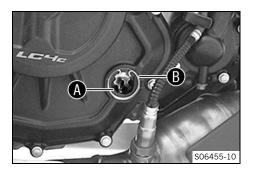

## 18.2 Changing the engine oil and oil filter, cleaning the oil screens



#### WARNING

**Danger of scalding** Engine and gear oil heat up when the motorcycle is operated.

- Wear suitable protective clothing and safety gloves.
- In the event of scalding, rinse the area affected immediately with lukewarm water.



#### NOTE


**Environmental hazard** Hazardous substances cause environmental damage.

- Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.

Condition: The engine is at operating temperature

#### Preparatory work

Stand the motorcycle on a level surface using the side stand.

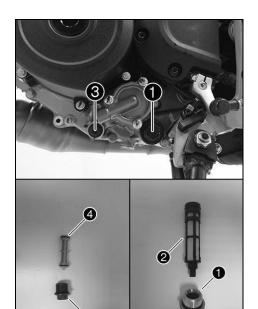




- Place an appropriate container under the engine.
- Remove screw plug 1 with O-ring.
- Remove oil screen 2 with the O-ring.
- Remove screw plug **3** with oil screen **4**.
- Allow the engine oil to drain completely.
- Thoroughly clean the screw plug and oil screen.
- Position oil screen 2 and mount and tighten screw plug 1 with the O-ring.

Oil screen screw plug, large	
M24×1.5	11 Nm
	(8.1 ft⋅lb <sub>f</sub> )


- Mount and tighten screw plug **3** with oil screen **4** and the O-ring.

Oil screen screw plug, small	
M17×1.5	11 Nm
	(8.1 ft·lb <sub>f</sub> )

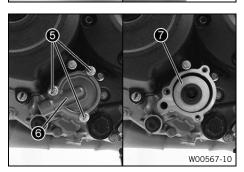

W00564-10

- Remove **5** screws.
- Take off oil filter cover 6 with the O-ring.
- Pull oil filter out of the oil filter housing.
- Allow the engine oil to drain completely.
- Thoroughly clean the parts and the sealing surface.

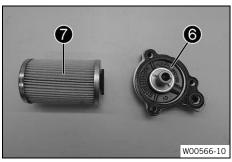

- Insert new oil filter 7.
- Oil the O-ring of the oil filter cover.
- Mount oil filter cover 6.
- Mount and tighten the screws.


Screw, oil filter cover	
M6	11 Nm
	(8.1 ft⋅lb <sub>f</sub> )



#### Note

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

# 18 Service work on the engine

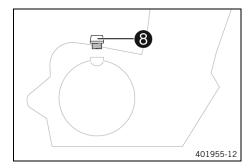

Remove filler plug (3) with the O-ring, and fill up with engine oil.

engine oil	
Engine oil (SAE 15W/50)  (p. 149)  Partially synthetic	1.5 I (0.40 liq. gal <sub>US</sub> )

Mount and tighten the oil plug together with the O-ring.



#### **DANGER**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and check it for leaks.

#### Reworking


Check the engine oil level. (p. 122)

#### 18.3 Adding engine oil



#### Note

Too little engine oil or poor-quality engine oil will result in premature wear of the engine.

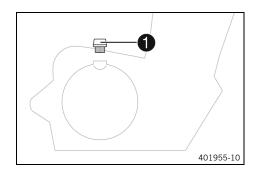

#### Filling procedure

Remove filler plug with the O-ring, and fill up with engine oil.

Engine oil (SAE 15W/50) (p. 149)
Partially synthetic



#### Note

In order to achieve optimal engine oil performance, it is not advisable to mix different engine oils.

KTM recommends changing the engine oil if necessary.

Mount and tighten the oil plug together with the O-ring.



#### **DANGER**

**Danger of poisoning** Exhaust gases are toxic and inhaling them may result in unconsciousness and death.

- Always ensure that there is sufficient ventilation when running the engine.
- Use suitable exhaust extraction when starting or running the engine in an enclosed space.
- Start the engine and check it for leaks.

# Reworking

- Check the engine oil level. (p. 122)

•

#### 19.1 Cleaning the motorcycle



#### NOTE

**Material damage** Components can be damaged or destroyed if a high-pressure cleaner is used incorrectly. The high pressure forces water into the electrical components, socket connectors, clutch cables, and bearings, etc.

Too high a pressure can cause malfunctions and destroy components.

- Do not direct the water jet directly on to electrical components, socket connectors, clutch cables, or bearings.
- Maintain a minimum distance between the nozzle of the high-pressure cleaner and the component.

Minimum distance	60 cm
	(23.6 in)



#### NOTE


**Environmental hazard** Hazardous substances cause environmental damage.

 Dispose of oils, grease, filters, fuel, cleaning agents, brake fluid, etc. correctly and in accordance with the applicable regulations.



#### Note

Clean the motorcycle regularly to maintain its value and appearance over a long period. Avoid direct sunshine when cleaning the motorcycle.

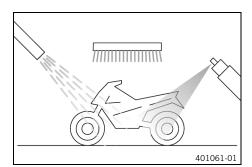

- Seal the exhaust system to prevent water from entering into it.
- Remove loose dirt first with a soft jet of water.
- Spray the heavily soiled parts with a standard commercial motorcycle cleaner and clean using a brush.

Never apply motorcycle cleaner to a dry motorcycle; always rinse the vehicle with water first.

Environmentally neutral universal cleaning agent (p. 153)



#### Note

Use warm water containing standard motorcycle cleaner and a soft sponge.

Clean the motorcycle with cold water if it has been used on salted roads. Warm water enhances the corrosive effects of salt.

- After rinsing the motorcycle with a gentle spray of water, allow it to dry thoroughly.
- Remove the cover from the exhaust system.



#### **WARNING**

**Danger of accidents** Moisture and dirt impair the brake system.

- Brake carefully several times to dry out and remove dirt from the brake pads and the brake discs.
- After cleaning, ride the vehicle a short distance until the engine warms up.

#### Note

The heat produced causes water to evaporate at inaccessible locations in the engine and on the brake system.

- Push back the sleeves of the handlebar controls to allow any water that has penetrated to evaporate.
- After the motorcycle has cooled off, lubricate all moving parts and pivot points.
- Clean the chain. (p. 75)
- Treat bare metal (except for brake discs and the exhaust system) with an anticorrosive.

Preserving materials (p. 153)

Treat all painted parts with a mild paint care product.

Do not polish parts that were matte when delivered as this would strongly impair the material quality.

Shine spray with beading effect (p. 153)

 Treat all plastic parts and powder-coated parts with a mild cleaning and care product.

Cleaning agents for plastics, glass, lacquers, metals, windshields and visors (9. 153)

- Lubricate the ignition and steering lock.

Universal oil spray (p. 149)

19.2 Checks and maintenance steps for winter operation



#### WARNING

**Danger of accidents** Salt on the roads impairs the brake system.

- Brake carefully several times to remove salt from the brake linings and the brake discs.



#### WARNING

**Danger of accidents** Oil, grease or wax on the brake discs reduces the brake action.


- Always keep the brake discs free of oil, fat and wax.
- Clean the brake discs with brake cleaner when necessary.



#### Note

If you use the motorcycle in winter, you must expect salt on the roads. You should therefore take precautions against aggressive road salt.

Clean the motorcycle with cold water if it has been used on salted roads. Warm water enhances the corrosive effects of salt.

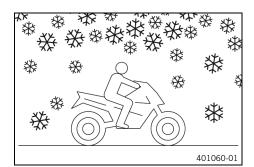

- Clean the motorcycle. (p. 126)
- Clean the brakes.

# i

#### Note

After every trip on salted roads, thoroughly clean the motorcycle and, in particular, the brake calipers and brake pads, after they have cooled down and without removing them, with cold water and dry carefully. After riding on salted roads, thoroughly clean the vehicle with cold water and dry it well.

 Treat the engine, link fork, and all other bare or zinc-plated parts (except the brake discs) with a wax-based corrosion inhibitor.

Corrosion inhibitor must not come in contact with the brake discs as this would greatly reduce the braking force.

- Clean the chain. (p. 75)


4

#### 20.1 Storage



#### Note

If you plan to garage the motorcycle for a longer period, perform the following steps or have them performed. Before storing the motorcycle, check all parts for function and wear. If service, repairs, or replacements are necessary, you should do this during the storage period (workshops less busy). In this way, you can avoid long workshop waiting times at the start of the new season.

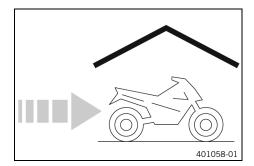

 When refueling for the last time before taking the motorcycle out of service, add fuel additive.

Fuel additive (p. 148)

– Refuel. 🗐 (p. 67)



#### Tip

Fill the fuel tank completely as specified, using fuel with the lowest possible ethanol content.

- Clean the motorcycle. (p. 126)
- Change the engine oil and the oil filter, clean the oil screens.
  - (p. 122)
- Check the frost protection and coolant level. (p. 112)
- Check the tire pressure. (p. 100)
- Remove the 12 V battery. 🔌 🗐 (p. 101)
- Charge the 12 V battery. 🔌

Storage temperature of the 12 V 0 °C ... 35 °C battery without direct sunlight (32.0 °F ... 95.0 °F)

 Store the vehicle in a dry location that is not subject to large fluctuations in temperature.



#### Note

KTM recommends jacking up the motorcycle.

- Raise the motorcycle with the rear lifting gear. (p. 72)
- Lift the motorcycle with the front lifting gear. (p. 73)

Cover the motorcycle with a tarp or cover that is permeable to air.


Do not use any non-porous materials, as moisture cannot escape and corrosion can occur.



#### Note

Avoid running the engine of a motorcycle in storage for a short time only. Since the engine cannot warm up properly, the water vapor produced during combustion condenses and causes valves and the exhaust system to rust.

#### 20.2 Preparing for use after storage

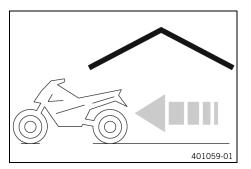

- Take the motorcycle off the front lifting gear. (p. 73)
- Remove the rear of the motorcycle from the lifting gear. (p. 72)

- Perform checks and maintenance measures when preparing for use. 💓 (p. 59)
- Take a test ride.

#### 21.1 troubleshooting

Cause	Finding	Remedy
The engine does not turn over when the start button is actuated	Operating error 12 V battery discharged Fuse 1, 3, 4, or 7 is blown No ground connection present on the starter motor	<ul> <li>Carry out the starting procedure.</li> <li>(p. 59)</li> <li>Charge the 12 V battery.</li> <li>(p. 102)</li> <li>Change the fuses of individual electrical power consumers.</li> <li>(p. 107)</li> <li>Check the ground connection.</li> </ul>
The engine only turns over if the clutch lever is pulled	The vehicle is in gear The vehicle is in gear and the side stand is folded out	<ul> <li>Shift the transmission into the neutral position.</li> <li>Shift the transmission into the neutral position.</li> </ul>
The engine turns but does not start	Operating error Quick-lock coupling not joined Malfunction in the electronic fuel injection	<ul> <li>Carry out the starting procedure.</li> <li>(p. 59)</li> <li>Join quick-lock couplings.</li> <li>Read out the fault memory using the diagnostics tool.</li> </ul>
Engine has too little power	Air filter is very dirty Fuel filter is very dirty Malfunction in the electronic fuel injection	<ul> <li>Change the air filter.</li> <li>Check the fuel pressure.</li> <li>Read out the fault memory using the diagnostics tool.</li> </ul>
Engine overheats	Too little coolant in cooling system Radiator fins very dirty Foam formation in the cooling system Thermostat defective Fuse <b>5</b> blown Defect in radiator fan system	<ul> <li>Check the transmission and cooling system for leaks.</li> <li>Check the coolant level. (p. 114)</li> <li>Clean the radiator fins.</li> <li>Drain the coolant. (p. 115)</li> <li>Fill/bleed the cooling system. (p. 115)</li> <li>Check the thermostat.</li> <li>Change the fuses of individual electrical power consumers. (p. 107)</li> <li>Check the radiator fan system.</li> </ul>
The malfunction indicator light lights up yellow	Malfunction in the electronic fuel injection	<ul> <li>Read out the fault memory using the diagnostics tool.</li> </ul>
The engine dies during the trip	Lack of fuel Fuse 1, 3, 4, or 7 is blown	<ul> <li>Refuel. (p. 67)</li> <li>Change the fuses of individual electrical power consumers. (p. 107)</li> </ul>
The ABS warning light lights up	ABS fuse blown Large difference in wheel speeds of the front and rear wheels Malfunction in ABS	<ul> <li>Change the ABS fuses. (p. 105)</li> <li>Stop the vehicle, switch off the ignition, and start it again.</li> <li>Read out the ABS fault memory using the diagnostic tool.</li> </ul>
High oil consumption	Engine vent hose bent The engine oil level is too high The engine oil is too thin (low viscosity)	<ul> <li>Route the vent hose without bends or change it if necessary.</li> <li>Check the engine oil level.</li> <li>(p. 122)</li> </ul>

# 21 Troubleshooting

Cause	Finding	Remedy
		- Change the engine oil and the oil filter, clean the oil screens. (p. 122)
Headlight and position light are not functioning	Fuse <b>6</b> blown	- Change the fuses of individual electrical power consumers.
Turn signal, brake light, and horn are not functional	Fuse 4 or 6 blown	- Change the fuses of individual electrical power consumers. [3] (p. 107)
Time is not displayed or not correctly displayed	Fuse 2 blown	- Change the fuses of individual electrical power consumers. [3] (p. 107)
12 V battery discharged	Ignition was not switched off when vehicle was parked The 12-V battery is not being charged by the alternator	<ul> <li>Charge the 12 V battery.</li> <li>(p. 102)</li> <li>Check the charging voltage.</li> <li>Check the open-circuit current.</li> </ul>
The dashboard shows nothing on the display	Fuse 2 blown	- Change the fuses of individual electrical power consumers. (p. 107)
Speedometer in combination instrument is not functioning	Speedometer wiring harness is damaged or plug-in connector is oxidized	Check the wiring harness and plug-in connector.

# 22.1 Engine

# 22.1.1 Technical data - engine

Design	1-cylinder 4-stroke engine, water-cooled
Displacement	398 cm <sup>3</sup>
	(24.29 in <sup>3</sup> )
Stroke	64 mm
	(2.52 in)
Bore	89 mm
	(3.50 in)
Compression ratio	12.59:1
Control	DOHC, four valves controlled via cam lever, chain drive
Valve diameter, intake	36 mm
	(1.42 in)
Valve diameter, exhaust	29 mm
	(1.14 in)
Valve clearance, intake, cold	0.10 mm 0.15 mm
	(0.0039 in 0.0059 in)
Valve clearance, exhaust, cold	0.15 mm 0.20 mm
	(0.0059 in 0.0079 in)
Crankshaft bearing	Slide bearing
Big (bottom) end bearing	Slide bearing
Piston	Forged aluminum
Piston rings	1 compression ring, 1 tapered compression piston ring, 1 oil scraper ring
Engine lubrication	Pressure circulation lubrication
Primary transmission	33:86
Clutch	Multi-disc clutch in oil bath
Transmission	Sixth-gear manual transmission
Gear ratios	
1st gear	12:32
2nd gear	14:26
3rd gear	19:27
4th Gear	21:24
5th Gear	23:22
6th gear	25:21
Mixture formation	Electronic fuel injection
Ignition system	Fully electric ignition
Alternator	• 12 V
	• 230 W (0.308 hp)
Spark plug	BOSCH VR6NEU
Plug gap of spark plug	1 mm
· · · · · · · · · · · · · · · · · ·	(0.04 in)
Cooling	Liquid cooling, permanent circulation of coolant by water pump

·	1,550 rpm 1,650 rpm (25.83 Hz 27.50 Hz)
Starting aid	Starter motor

#### 22.1.1.1 Coolant capacity

coolant	
Coolant (p. 150)	11
Antifreeze protection to at least: -25 °C (-13.0 °F)	(0.3 liq. gal <sub>US</sub> )

# 22.1.1.2 Filling quantity of engine oil

engine oil	
Engine oil (SAE 15W/50) (p. 149)	1.5
Partially synthetic	(0.40 liq. gal <sub>US</sub> )

# 22.2 Chassis

#### 22.2.1 Technical data - chassis

Frame	Lattice frame of steel tubes, powder-coated		
Brake system			
front	Disc brake with dual-piston brake caliper, floating		
rear	Disc brake with single-pot brake caliper, floating		
Suspension travel:			
front	229 mm		
	(9.02 in)		
rear	230 mm		
	(9.06 in)		
Brake discs - diameter			
front	285 mm		
	(11.22 in)		
rear	240 mm		
	(9.45 in)		
Brake disc wear limit			
front	4.5 mm		
	(0.177 in)		
rear	4.5 mm		
	(0.177 in)		
Tire pressure when solo			
front	2.0 bar		
	(29.0 psi)		
rear	2.0 bar		
	(29.0 psi)		
Tire pressure with passenger / full payload			
front	2.0 bar		
	(29.0 psi)		

rear	2.2 bar
	(31.9 psi)
Final drive	13:43
	Note  Modifications to the transmission ratio are not permitted and can lead to malfunctions.
Chain	5/8 x 1/4" (520) X-ring
Steering head angle	62.9° (1.098 rad)
Wheelbase	1,475 ±15.5 mm (58.07 ±0.610 in)
Seat Height unloaded	892 mm (35.12 in)
Ground clearance unloaded	270 mm (10.63 in)
Dry weight	159.2 kg (350.98 lb)
Maximum permissible front axle load	135 kg (297.6 lb)
Maximum permissible rear axle load	240 kg (529.1 lb)
Maximum permissible total weight	375 kg (826.7 lb)

#### 22.2.2 Technical data - tires

Tire front	Rear tire
90/90 R 21 M/C 54T M+S TL	140/80 R 18 M/C 70S M+S TL
Metzeler Karoo 4	Metzeler Karoo 4

The tires specified represent one of the possible series production tires. For alternative manufacturers, if any, contact an authorized dealer or qualified tire dealership. If local road approval regulations apply, these and the respective technical specifications must be observed.

#### 22.2.3 Fuel capacity

Total fuel tank capacity, approx.		
(All except BR models)	91	
Super unleaded (ROZ 95) 🗐 (p. 148)	(2.4 liq. gal <sub>US</sub> )	
(BR model) Super unleaded, type C (ROZ 95/RON 95/PON 91) (p. 148)		
Fuel reserve, approx.		
(All except BR models)	21	
Super unleaded (ROZ 95) 🗐 (p. 148)	(0.5 liq. gal <sub>US</sub> )	
(BR model) Super unleaded, type C (ROZ 95/RON 95/PON 91) (p. 148)		

# 22.3 Electrics

#### 22.3.1 Electrics

12 V battery	ETZ-9-BS	Battery voltage: 12 V
		Nominal capacity: 8 Ah
		Maintenance-free
Fuse	75011088010	10 A
Fuse	75011088015	15 A
Fuse	90111088025	25 A
Fuse	75011088030	30 A

# 22.3.2 Electrical system

Headlight	LED
Parking light	LED
Dashboard illumination and indicator lights	LED
Turn signal	LED
Brake/tail light	LED
License plate lighting	LED

# 22.4 Fork

#### 22.4.1 Technical data - fork

Fork part number	A603C142Y201102	
Compression damping		
Standard	10 clicks	
Sport	15 clicks	
Rebound damping	•	
Standard	10 clicks	
Sport	15 clicks	
Spring length with preload spacer(s)	480 mm	
	(18.90 in)	
Spring rate		
Medium (standard)	5.0 N/mm	
	(28.55 lb <sub>f</sub> /in)	
Fork length	868 mm	
	(34.17 in)	

# 22.4.2 Fork capacity

Fork oil per fork leg	
Fork oil (SAE 5) (p. 149)	460 ±5 ml
	$(15.55 \pm 0.17 \text{ fl. oz}_{US})$

# 22.5 Shock absorber

#### 22.5.1 Technical data - shock absorber

Shock absorber part number	A603C442Y313102	
Rebound damping		
Standard	10 clicks	
Sport	4 clicks	
Preload		
Standard	7 mm (0.28 in)	
Sport	4 mm (0.16 in)	
Spring rate		
Weight of rider: 75 kg 85 kg (165.3 lb 187.4 lb)	105 N/mm (599.6 lb <sub>f</sub> /in)	
Spring length	217 mm (8.54 in)	
Gas assisted	16 bar (232 psi)	
Static sag	29.5 mm (1.161 in)	
Riding sag	78 mm (3.07 in)	
Installation position	351 mm (13.82 in)	

## 22.5.2 Capacity of shock absorber oil

Shock absorber oil	
Shock absorber oil (50180751S1) (SAE 2.5) (p. 149)	Fill to half-full.

# 22.6 Tightening torque

## 22.6.1 engine tightening torques

Screw, shift shaft sensor	6 Nm	
M5×0.8	(4.4 ft⋅lb <sub>f</sub> )	
		Loctite® 243
Oil nozzle	6 Nm	
M5×0.8	(4.4 ft⋅lb <sub>f</sub> )	
		Loctite® 243
Oil spray jet, camshaft bridge	9 Nm	
M5×0.8	(6.6 ft⋅lb <sub>f</sub> )	
		Loctite® 243
Screw, crankshaft position sensor	5.5 Nm	
M5×0.8	(4.06 ft⋅lb <sub>f</sub> )	
		Loctite® 243

# 22 Technical specifications

Stator screw	7.5 Nm	
M5×0.8	(5.53 ft·lb <sub>f</sub> )	
	, , ,	Loctite® 243
Screw, retaining bracket, stator cable	5.5 Nm	
M5×0.8	(4.06 ft⋅lb <sub>f</sub> )	
		Loctite® 243
Screw, gear position sensor  M5	5.5 Nm (4.06 ft·lb <sub>f</sub> )	
IVIS	(4.00 It·Ib <sub>f</sub> )	Loctite® 243
Piston oil spray jet	5.5 Nm	
M5×0.8	(4.06 ft⋅lb <sub>f</sub> )	
		Loctite® 243
Oil spray jet	6 Nm	
M5×0.8	(4.4 ft⋅lb <sub>f</sub> )	1
Community filters are seen	11 Nm	Loctite® 243
Screw, oil filter cover M6	(8.1 ft⋅lb <sub>f</sub> )	
Screw plug, water pump drain hole	11 Nm	
M6	(8.1 ft⋅lb <sub>f</sub> )	
	·	Loctite® 243
Nut, water pump impeller	8 Nm	
M6	(5.9 ft⋅lb <sub>f</sub> )	
		Loctite® 243
Screw, clutch cover M6	11 Nm (8.1 ft·lb <sub>f</sub> )	
Screw, autodecompression mechanism	9 Nm	
M6	(6.6 ft⋅lb <sub>f</sub> )	
	(212 1212)	Loctite® 243
Screw, camshaft bearing bridge	9 Nm	
M6	(6.6 ft⋅lb <sub>f</sub> )	
Screw, valve cover	11 Nm	
M6	(8.1 ft⋅lb <sub>f</sub> )	
Screw, retaining bracket	11 Nm	
M6	(8.1 ft⋅lb <sub>f</sub> )	Loctite® 243
Screw, chain securing guide	11 Nm	LOUGHO L 10
M6	(8.1 ft⋅lb <sub>f</sub> )	
		Loctite® 243
Screw, engine case	11 Nm	
M6×35	(8.1 ft⋅lb <sub>f</sub> )	
	1.1 N.	Loctite® 243
Screw, engine case M6×75	11 Nm (8.1 ft·lb <sub>f</sub> )	
WID*/5	(0.1 IL·ID <sub>f</sub> )	Loctite® 243
Screw, freewheel gear retaining bracket	11 Nm	
M6	(8.1 ft⋅lb <sub>f</sub> )	
		Loctite® 243

Screw, ignition cover	11 Nm	
Me		
Shift star screw	11 Nm	
Me		
	(212 1212)	Loctite® 243
Screw, engine vent plate	11 Nm	
Me	(8.1 ft⋅lb <sub>f</sub> )	
Detent arm screw	11 Nm	
Me	(8.1 ft⋅lb <sub>f</sub> )	
		Loctite® 243
Screw, water pump cover	11 Nm	
Me	(8.1 ft⋅lb <sub>f</sub> )	
Screw, release for timing chain tensioner	8 Nm	
Me	, 17	
Screw, timing chain tensioner	11 Nm	
Me	, 17	
Screw, starter motor	11 Nm	
Me		
Screw, special nozzle retaining bracket	7 Nm	
M6×1	(5.2 ft⋅lb <sub>f</sub> )	
		Loctite® 243
Screw, timing chain tensioning rail	11 Nm	
M6×3	(8.1 ft⋅lb <sub>f</sub> )	Loctite® 243
Causay all assess assess	11 Nm	LUCINE 243
Screw, oil pump cover  M6×1		
	11 Nm	
Screw, thermostat		
Chain shaft screw, cylinder head	11 Nm	
M6		
Screw, timing chain tensioner	11 Nm	
Me		
Bracket for ignition coil cable	11 Nm	
Me		
Screw, inlet sleeve	9 Nm	
Me		
Stud, exhaust flange	21 Nm	
M	(15.5 ft⋅lb <sub>f</sub> )	
Exhaust flange nut	21 Nm	
M8		
Screw, spring thrust bearing of the shift shaft	21 Nm	
M8×1.25	(15.5 ft⋅lb <sub>f</sub> )	
		Loctite® 243
TDC locking screw, crankshaft	15.5 Nm	
M8×1.25	(11.43 ft·lb <sub>f</sub> )	
		Loctite® 243

TDC locking screw, balancer shaft		15.5 Nm
M8×1.25		
	WO.1.23	Loctite® 243
Screw, intermediate gear		21 Nm
ociew, intermediate gear	M8×1.25	(15.5 ft·lb <sub>f</sub> )
Screw, conrod bearing	1.	17.7 Nm
M9×1	1.	(13.05 ft·lb <sub>f</sub> )
5 -	2.	60°
	2.	(1.05 rad)
Coolant temperature sensor		13 Nm
obblant temperature sensor	M10×1.5	
Screw plug, cam lever shaft	20 210	9 Nm
ociew plug, can level share	M10×1	(6.6 ft·lb <sub>f</sub> )
	11110 1	Loctite® 243
Cylinder head screw		62 Nm
Symmetricus serem	M10×1.25	
Oil pressure sensor	20 2.20	9 Nm
on pressure sensor	M10×1	(6.6 ft·lb <sub>f</sub> )
Screw, camshaft gear wheel		42 Nm
Screw, carristiant gear wheel	M10×1	(31.0 ft·lb <sub>f</sub> )
	WITO	Loctite® 243
Screw, rotor		125 Nm
ociem, rotor	M12×1.5	
Spark plug	22 210	16 Nm
opan plag	M12×1.25	
Nut, primary gear wheel/timing chain sprocket		136 Nm
Trut, primary gear wheeletining chain sprocket	M16×1.5	(100.3 ft·lb <sub>f</sub> )
Nut, inner clutch hub	25 215	119 Nm
reat, filler crater has	M16LH×1.5	
Oil pressure regulator valve	102 110	39 Nm
on pressure regulator varve	M16×1.5	(28.8 ft·lb <sub>f</sub> )
Oil screen screw plug, small	20 210	11 Nm
on screen screw plug, sman	M17×1 5	(8.1 ft·lb <sub>f</sub> )
Screw plug, alternator cover TDC		9 Nm
Goron plug, diterilator cover 100	M18×1.5	(6.6 ft·lb <sub>f</sub> )
Nut, countershaft gear		95 Nm
Trat, Countermant Soul	M18×1.5	(70.1 ft·lb <sub>f</sub> )
Screw plug, alternator cover	11110	11 Nm
Solon plub, diterilated cover	M24×1.5	(8.1 ft·lb <sub>f</sub> )
Oil screen screw plug, large		11 Nm
on serven serem plug, luige	M24×1.5	(8.1 ft·lb <sub>f</sub> )
	WIZ-11.5	(C.I ICIDI)

# 22.6.2 Chassis tightening torques

Oxygen sensor	49 Nm (36.1 ft·lb <sub>f</sub> )
Remaining screws on chassis	4 Nm
M4	$(3.0 \text{ ft} \cdot \text{lb}_f)$

Screw, fuel tank lid	5 Nm
M5	(3.7 ft·lb <sub>f</sub> )
Remaining screws on chassis	5 Nm
M5	(3.7 ft⋅lb <sub>f</sub> )
Screw, tail light	5 Nm
M5	(3.7 ft·lb <sub>f</sub> )
Screw, dashboard bracket on dashboard	4 Nm
M5	(3.0 ft·lb <sub>f</sub> )
Screw, connector support on dashboard bracket	7 Nm
M5	(5.2 ft·lb <sub>f</sub> )
Screw, turn signal on turn signal bracket	6 Nm
M5	(4.4 ft⋅lb <sub>f</sub> )
Screw, phonic wheel on front wheel	7 Nm
M5×8	(5.2 ft⋅lb <sub>f</sub> )
Screw, phonic wheel on rear wheel	7 Nm
M5×8	(5.2 ft·lb <sub>f</sub> )
Screw, side stand sensor	5 Nm
M6	(3.7 ft·lb <sub>f</sub> )
Screw, bell crank shift lever	16 Nm
M6	'
Screw, chain slider guard	9 Nm
	(6.6 ft⋅lb <sub>f</sub> )
Screw, brake fluid reservoir for rear brake	7 Nm
M6	, 1,
Screw, radiator holder	6 Nm
	(4.4 ft⋅lb <sub>f</sub> )
Screw, ignition coil	8 Nm
M6	(5.9 ft·lb <sub>f</sub> )
Screw, front fender on triple clamp	6 Nm
	(4.4 ft·lb <sub>f</sub> )
Screw, rear fender on triple clamp	6 Nm
M6	
Screw, fuel tank	11 Nm
M6	(8.1 ft·lb <sub>f</sub> )
Remaining screws on chassis	9 Nm
M6	(6.6 ft·lb <sub>f</sub> )
Remaining nuts on chassis	15 Nm
M6	(11.1 ft·lb <sub>f</sub> )
Screw, top main silencer	11 Nm
M6	(8.1 ft·lb <sub>f</sub> )
Screw, ABS modulator on modulator bracket  M6×9	7 Nm (5.2 ft·lb <sub>f</sub> )
Screw, ABS modulator bracket on silent block M6×8	7 Nm (5.2 ft·lb <sub>f</sub> )
Screw, air filter box	7 Nm
M6	(5.2 ft·lb <sub>f</sub> )

# 22 Technical specifications

ABO 11 111 1 1 1 1	I
Screw, ABS module retaining bracket on frame	7 Nm
M6	(5.2 ft·lb <sub>f</sub> )
Screw, ignition lock (tamper-proof screw)	10 Nm
M6	(7.4 ft·lb <sub>f</sub> )
Fuel tank cover screw	6 Nm
M6	(4.4 ft·lb <sub>f</sub> )
Fuel tank cover screw	7 Nm
M6	(5.2 ft·lb <sub>f</sub> )
Screw, radiator shield	8 Nm
M6	(5.9 ft·lb <sub>f</sub> )
Screw, front sprocket cover	5 Nm
M6×12	
Screw, front sprocket cover	11 Nm
M6×16	· ·
Screw, frame cover on frame	6 Nm
M6×9	(4.4 ft·lb <sub>f</sub> )
Screw, air intake cover on frame	6 Nm
M6×9	(4.4 ft·lb <sub>f</sub> )
Screw, snorkel on frame	7 Nm
M6×12	,
Screw, radiator tank to front frame	8 Nm
M6×25	·
Screw, radiator tank on rear frame	6 Nm
M6×16	$(4.4 \text{ ft} \cdot \text{lb}_{\text{f}})$
Screw, regulator rectifier on frame	7 Nm
M6×28	(5.2 ft·lb <sub>f</sub> )
Screw, seat lock on subframe	7 Nm
M6×20	
Screw, license plate holder on subframe	7 Nm
M6×15	·
Screw, tail section on license plate holder support	7 Nm
M6×9	·
Screw, brake cylinder on footpeg bracket	10 Nm
M6×16	(7.4 ft·lb <sub>f</sub> )
Screw, inner cover on mask support	6 Nm
M6×19	(4.4 ft·lb <sub>f</sub> )
Screw, radiator shoud on radiator and fuel tank spoiler	6 Nm
M6×9	(4.4 ft·lb <sub>f</sub> )
Screw, dashboard bracket on triple clamp	6 Nm
M6	(4.4 ft⋅lb <sub>f</sub> )
Screw, brake line guide on bottom triple clamp	7 Nm
M6×9	(5.2 ft·lb <sub>f</sub> )
Screw, chain sliding guard on link fork	7 Nm
M6	(5.2 ft·lb <sub>f</sub> )
Screw, brake line bracket on swingarm	7 Nm
M6×9	(5.2 ft⋅lb <sub>f</sub> )

Carour handlahar usimht an handlahar	O Nm
Screw, handlebar weight on handlebar M6×45	9 Nm (6.6 ft·lb <sub>f</sub> )
	7 Nm
Screw, air filter on air box	
M6×10	(5.2 ft·lb <sub>f</sub> )
Screw, intake air temperature sensor on air box  M6	5 Nm (3.7 ft·lb <sub>f</sub> )
Screw, bottom triple clamp	12 Nm
M8	(8.9 ft⋅lb <sub>f</sub> )
Screw, top triple clamp	17 Nm
M8	•
Screw, fork shoe	15 Nm
M8	(11.1 ft·lb <sub>f</sub> )
Screw, front brake disc	30 Nm
M8	(22.1 ft·lb <sub>f</sub> )
Screw, rear brake disc	30 Nm
M8	(22.1 ft⋅lb <sub>f</sub> )
Handlebar clamp screw	20 Nm
M8	(14.8 ft⋅lb <sub>f</sub> )
Screw, front brake caliper	30 Nm
M8	(22.1 ft⋅lb <sub>f</sub> )
	Loctite® 243
Nut, rear sprocket	34 Nm
M8	(25.1 ft·lb <sub>f</sub> )
Screw, horn	16 Nm
M8	(11.8 ft⋅lb <sub>f</sub> )
Passenger footrest support screw	25 Nm
M8	(18.4 ft·lb <sub>f</sub> )
Screw, grip handle on subframe	25 Nm
M8×20	(18.4 ft⋅lb <sub>f</sub> )
Remaining screws on chassis	25 Nm
M8	(18.4 ft·lb <sub>f</sub> )
Remaining nuts on chassis	30 Nm
M8	
Screw, bottom main silencer	21 Nm
M8	(15.5 ft⋅lb <sub>f</sub> )
Screw, silencer on cylinder head	21 Nm
M8	(15.5 ft·lb <sub>f</sub> )
Screw, footpeg bracket on top frame	25 Nm
M8×20	(18.4 ft·lb <sub>f</sub> )
Screw, footpeg bracket on bottom frame	25 Nm
M8×30	(18.4 ft·lb <sub>f</sub> )
	25 Nm
Screw, engine fixing arm on frame  M8×25	
	(18.4 ft·lb <sub>f</sub> )
Screw, tail end lower part on subframe	10 Nm
MO: 10	
M8×19	(7.4 ft·lb <sub>f</sub> )
Screw, rear fairing on subframe  M8×19  M8×20	10 Nm (7.4 ft·lb <sub>f</sub> )

Adjusting ring, fork bearing		10 Nm
	M22	(7.4 ft⋅lb <sub>f</sub> )
Screw, wheel spindle, front		45 Nm
	M24	(33.2 ft·lb <sub>f</sub> )
Nut, steering head	1.	45 Nm
M30		(33.2 ft·lb <sub>f</sub> )
	2.	2 turns
		(720°)
	3.	15 Nm
		(11.1 ft⋅lb <sub>f</sub> )

#### 23.1 **Declarations of conformity**



#### Note

The functional and equipment scope is model-dependent and may not include all wireless systems and application areas referred to.

JNS Instruments Ltd. hereby declares that the 320T1100 wireless system conforms with the relevant guidelines. The full text of the Declaration of Conformity is available at the following Internet address. Certification website: https://www.ktm.com/320T1100

#### 23.2 **Country-specific declarations of conformity**



#### **Technical terms** ABS Anti-lock braking system Safety system that prevents locking of the wheels when riding straight ahead without the influence of lateral forces. ATIR Automatic Turn Indicator Reset Software, which automatically switches the indicator off according to a time or travel distance counter KTMconnect System for remote communication with suitable cell phones and communication systems for telephony and audio MTC Motorcycle Traction Control Additional engine management function, where the engine torque is reduced in the event of rear wheel OBD On-board diagnosis Vehicle system, which monitors the specified parameters of the vehicle electronics QUICKSHIFTER+ Engine electronics function for shifting up and down without clutch actuation

# B Fuels Super unleaded Standards • ROZ 95 → DIN EN 228 Super unleaded, type C Standards • ROZ 95/RON 95/PON 91 → ANP (Agência Nacional do Petróleo) #57 Fuel additive Recommended supplier MOTOREX® • FUEL STABILIZER

# C **Operating supplies** Street chain spray Recommended supplier **MOTOREX®** CHAINLUBE ROAD STRONG Fork oil Recommended supplier MOTOREX® RACING FORK OIL Standards SAE 5 $\rightarrow$ SAE Universal oil spray **Recommended supplier MOTOREX®** • JOKER 440 SYNTHETIC Long-life grease Recommended supplier **MOTOREX®** • Bike Grease 2000 **Engine oil Recommended supplier MOTOREX®** FORMULA 4T Standards → JASO T903 MA2 • SAE 15W/50 $\rightarrow SAE$ **Properties** Partially synthetic Shock absorber oil Order details 50180751S1

#### **Standards**

SAE 2.5 → SAE

# Brake fluid DOT 4 / DOT 5.1

# Recommended supplier

#### Castrol

• REACT PERFORMANCE DOT 4

# MOTOREX®

• BRAKE FLUID DOT 5.1

# Standards

→ DOT

# Coolant

# Recommended supplier

# MOTOREX®

• COOLANT M3.0

# Properties

• Antifreeze protection to at least -25 °C (-13.0 °F)

# D **Electrics** 12 V battery (ETZ-9-BS) **Product code** • ETZ-9-BS Properties Battery voltage 12 V Nominal capacity 8 Ah Maintenance-free Turn signal (LED) **Product code** • LED Brake/tail light (LED) **Product code** • LED License plate lighting Dashboard illumination and indicator lights (LED) **Product code** • LED Parking light (LED) Product code LED Headlight (LED) **Product code** • LED Fuse (75011088010) **Product code** 75011088010

# **Properties**

• 10 A

# Fuse (75011088015)

#### **Product code**

• 75011088015

# Properties

• 15 A

# Fuse (75011088020)

#### **Product code**

• 75011088020

# Properties

• 20 A

# Fuse (90111088025)

#### **Product code**

• 90111088025

# Properties

• 25 A

# Fuse (75011088030)

# **Product code**

• 75011088030

# Properties

• 30 A

# **Cleaning agents** Shine spray with beading effect **Recommended supplier MOTOREX®** MOTO SHINE MS1 Chain cleaner Recommended supplier MOTOREX® CHAIN CLEAN **Preserving materials Recommended supplier** MOTOREX® **MOTO PROTECT** Cleaning agents for plastics, glass, lacquers, metals, windshields and visors Recommended supplier **MOTOREX®** QUICK CLEANER **Environmentally neutral universal cleaning agent Recommended supplier MOTOREX®** MOTO CLEAN UNIVERSAL

# F Icons

# F.1 Symbol colors

# F.1.1 Red symbols

Red symbols indicate a fault status that requires immediate intervention.

<b>₹</b>	Coolant temperature indicator light lights up red
27	The oil pressure warning light lights up red

# F.1.2 Yellow and orange symbols

Yellow and orange symbols indicate a malfunction status that requires prompt intervention. Active driving aids are also represented by yellow or orange symbols.

(ABS)	The ABS warning lamp lights up yellow
(ABS) REAR	The ABS rear warning light lights up yellow
	The fuel level warning lamp lights up yellow
<b>+</b>	The <b>OBD</b> failure indicator light lights up yellow.
(TC)	TC indicator lamp lights up/flashes yellow
$\triangle$	General warning light lights up yellow

# F.1.3 Green and blue symbols

Green and blue symbols convey information.

	The high beam indicator lamp lights up blue
£.	Coolant temperature indicator light lights up blue
<b>+ +</b>	The turn signal indicator light flashes green with a steady blinking interval
N	The idle indicator lamp lights up green

1	Chain tension
12 V battery	adjusting
charging	checking
installation	Changing gear
removing	Clothing
A	Clutch lever
ABS85	adjusting the basic position 83
ABS button	Combination switch
	Coolant
ABS fuses	changing
changing	draining
ACC1	•
front	Coolant level
rear 111	checking
ACC2	Cooling system
front	filling/bleeding115
rear 111	<b>Cornering MTC</b>
Accessories	Customer service
Anti-lock braking system	D
Auxiliary substances	Dashboard
В	ABS 34
	audio
Brake discs	Bluetooth
checking	<b>Call</b> display
Brake fluid	Clock format
adding front brake 87	connectivity
adding to rear brake 91	coolant temperature display 29
Brake fluid level	Date format
checking on front brake 87	Display Mode
checking on rear brake 91	<b>Distance</b>
Brake lining retainers	Extra Functions
checking on front brake 89	favorites
checking on rear brake 93	Favorites display
Brake pad	<b>Fuel Cons</b>
checking on front brake 89	headset pairing
-	info
Brake pads  checking on rear brake	<b>Language</b>
5	last Destination 40
Brake pedal	Low Fuel Trip Meter
checking the free travel 89	MTC 35
free travel, adjusting 90	Navigation display (optional) 30
<b>Brakes</b>	pairing a phone
<b>Braking</b>	point of Interest 42
Breakdown	QUICKSHIFTER+ (optional)
towing	Remote Control Mode (optional) 31
	<b>Ride Mode</b>
C	Ride-Mode display 28
Chain	<b>Shift Light</b>
checking	skip Waypoint 41
cleaning	stop Navigation 42
dirt, checking for	Temperature

time	Fuse
Trip 1	of the individual electrical power consumers,
<b>Trip 2</b>	changing
Type of audio device 48	G
volume	Gear shift lever
<b>Warning</b>	adjusting
warnings	
Date	Н
adjusting	Handbrake lever
<b>Declarations of conformity</b>	adjusting the basic position 87
country-specific 146	Headlight
<b>Defined use</b>	adjusting headlight range 110
Diagnostic connector	Headlight setting
Difficult operating conditions	checking
<b>Driving</b> 61	Horn button
starting off	
E	Ignition lock
Electric starter	Implied warranty
Engine	Improper use
running in	K
Engine number	Kill switch
Engine oil	
adding	L
changing	Light switch
Engine oil level	Loading the vehicle
checking	<b>Luggage</b>
Environment	M
	Main fuse
F	changing
Figures	Manufacturer's warranty
Fork legs	Motorcycle
cleaning the dust boots	cleaning
Front fender	lifting gear at rear, raising with 72
installation	raising the front with lifting gear 73
removing	removing the front from the lifting gear 73
Front sprocket	removing the rear from the lifting gear 72
checking	Motorcycle traction control (optional) 120
Front wheel	0
installing	Oil filter
removing	changing
Frost protection	
checking	Oil screens
Fuel tank cap	cleaning
closing 20	On-board tool kit
opening	Operating conditions
Fuel tank fairing right	use in difficult conditions 11
installation 82	<b>Owner's manual</b>
removing	

P
Parking65Passenger footpegs21Passenger strap21
Play in the clutch lever
adjusting       84         checking       83
Preparing for use
after storage
notes on preparing for first use
Protective clothing
Q
QUICKSHIFTER+61
R
Rear hub damping rubbers checking
Rear sprocket checking
Rear wheel         installation
<b>Refueling</b> fuel
Resources
S
Safe use
Seat
mounting
Seat lock
Service
Shock absorber adjusting the spring preload
Side fairing right
installation
<b>Side stand</b>
Spare parts
Spoke tension checking
<b>Starting</b>
Steering
locking

Steering lock
USB socket
Tampering
Time
adjusting
Tire condition checking
Tire pressure checking
towing       66         Transport       66         Turn signal switch       17
U
<b>USB socket</b>
V
Vehicle identification number
W
Winter operation checks and maintenance steps
<b>Work rules</b>



3240187en 09/07/2025



